

MTA36

1 Spare parts list

POS.	ART.NUMB.	DENOMINATION	TYPE (*)	REMARKS
1	00310004667	Handle compl.	S	
2	00310004985	Top handle	S	
3	00310004984	Bellow handle	S	
4	00310003986	Handle joint	S	
5	00310004733	Handle blocking bolt assy	S	
6	00310002089	Dead man handle	S	
7	00310004748	Throttle cable	W	
8				
9	00310004029	Dead man handle switch	W	
10	00310004635	Hydraulic pump	W	
11	00310004698	Belief valve	W	
12				
13	00310004718	Hydraulic tube	W	
14	00310004530	Reduction pin	W	
15	00310004691	Ram	W	
16	00310004726	Thrust flanges	S	
17	00310004402	Retaining ring	S	
18	00310004156	Thrust bearing	W	
19	00310004637	Thrust fork	S	
20	00310004202	Collar	S	
21	00310004636	Spider	S	
22	00310004715	Fixing screw for arm	S	
23	00310004737	Adjusting bolt	S	
24	00310004630	Cam and arm assy	S	
25	00310002137	Fixing screw	S	
26	00310004166	Grease cup	S	
27	00310004402	Retaining ring	S	
28	00310004744	Guard ring	S	
29	00310004375	Belt guard	S	
30	00310004272	Clutch	W	
31	00310004352	Clutch shoes (set of 2)	W	
32	00310004370	Reducer	S	
33	00310004275	Pulley reducer	S	
34	00310004367	V-Belt	W	
35	00310004668	Engine support	S	
36	00310004391	Engine Honda GX 160	S	
37	00310004692	Kit spare parts	S	
38	00310004193	Rubber grip	S	

(*): S = Spare part, W = Wear part

Wear parts are worn out through normal use of the machine. The wear period depends a lot on the intensity of use of the machine. Wear parts must be serviced, used and eventually changed following the indications of the manufacturer. Any wear due to normal use of the machine will not be considered as a case of warranty. Genuine Clipper replacement parts should always be used.

2 Exploded parts drawing

MTA36-S0201

