



Spare Parts List

ET - Nr.:	Description
28536-07	Grip head
28536-10	Spring
28536-11	Screw
28536-12	Screw
28536-13	Wave washer
28536-14	Washer
28536-15	Retaining ring
28536-16	Support for abrasive belt
28536-17	Bracket
28536-18	Abrasive belt
28536-19	Washer
28536-20	Retaining ring
28536-21	Driving wheel
28536-22	Plunger pin
28536-23	Flange
28536-24	Screw
28536-25	Bearing
28536-27	Bushing
28536-28	Aluminum head
28536-29	Spring
28536-30	Knob
28536-31	Screw
28536-32	Plate
28536-33	Connector
28536-34	Screw
28536-35	Adapter 1
28536-36	Adapter 2
28536-38	Bearing
28536-39	Ring nut
28536-40	Shaft
28536-41	Fan
28536-42	Screw
28536-47	Board
28536-48	Screw
28536-49	Adjusting knob
28536-50	On-off-switch
28536-52	Bow
28536-53	Power supply cord
28536-54	Centering ring
28536-55	Pinion gear
28536-56	Retaining ring
28536-57	Spring
28536-58	Ball
28536-59	Label
28536-60	Ring gear
28536-61	Pinion gear
28536-62	Screw
28536-63	Bearing
28536-64	Housing
28536-65	Motor
28536-66	Backup-ring
28536-67	Cap
28536-97	Packaging
28536-99	Manual