


Illustration - Type - E

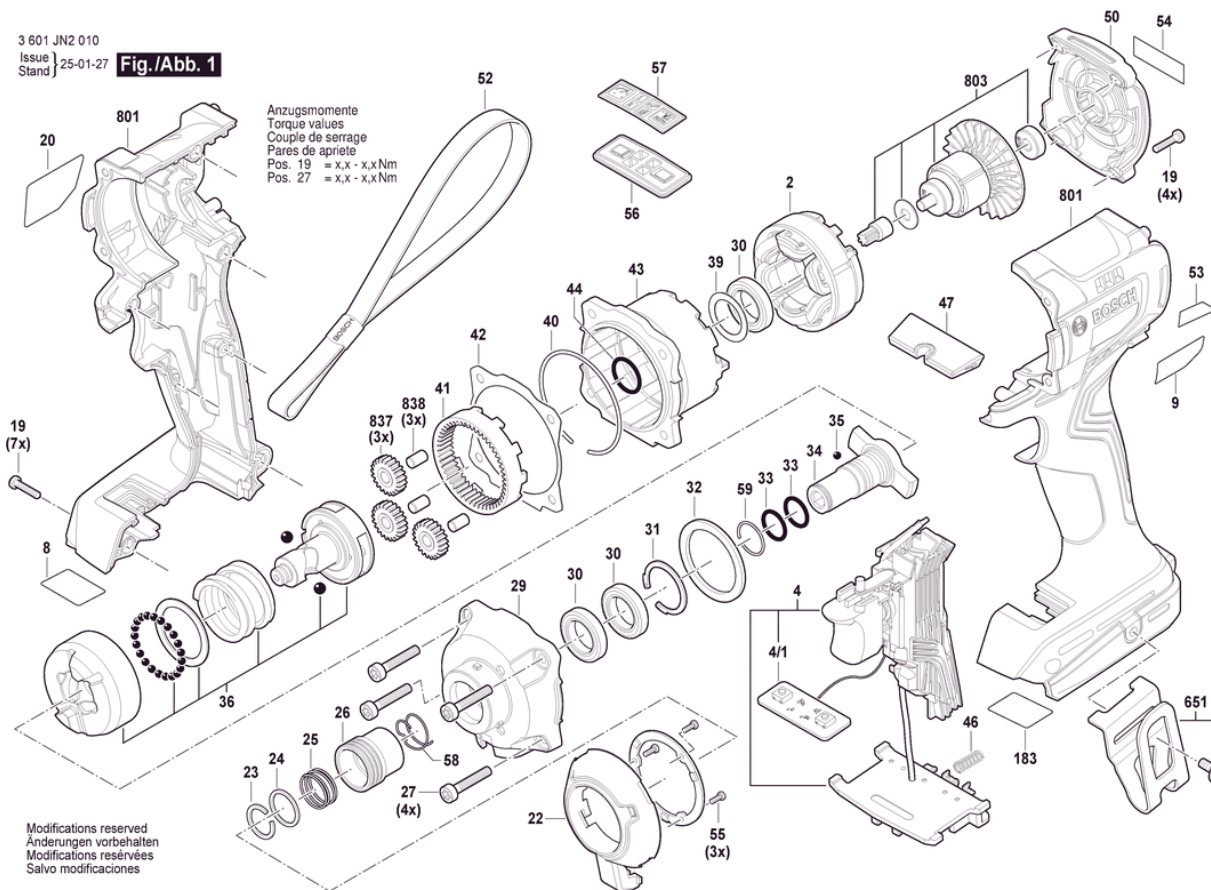

Spare parts list

Item	Part Number	Description	Illustration
2	1 619 PS0 571	Stator	1
4	1 619 PS2 209	Electronic Module	1
4/1	1 619 PS1 596	Electronic Module	1
8	1 619 PS1 774	Nameplate	1
9	1 619 PS1 776	Manufacturer's nameplate	1
19	1 619 PS0 575	Torx Flat-Head Screw	1
20	1 619 PS1 775	Warning Label	1
22	1 619 PS0 576	Cover	1
23	1 619 PS0 577	Retaining ring	1
24	1 619 PS0 578	Washer	1
25	1 619 PS0 579	Spring	1
26	1 619 PS0 617	Sleeve	1
27	1 619 PS0 581	Torx Flat-Head Screw	1
29	1 619 PS0 583	Gear Box	1
30	1 619 PS0 584	Ball Bearing	1
31	1 619 PS0 585	Retaining ring	1
32	1 619 PS0 586	Washer	1
33	1 619 PS0 587	O-Ring	1
34	1 619 PS0 618	Coupling Half	1
35	1 619 PS0 619	steel ball	1
36	1 619 PS0 590	Impact Mechanism	1
39	1 619 PS0 593	Washer	1
40	1 619 PS0 594	Retaining ring	1
41	1 619 PS0 595	Ring Gear	1
42	1 619 PS0 596	Sealing washer	1
43	1 619 PS0 597	Gear Housing	1
44	1 619 PS0 598	O-Ring	1
46	1 619 PS0 600	Spring	1
47	1 619 PS0 601	Reverse-Transfer Lever	1
50	1 619 PS0 602	End cap	1
52	1 619 PS0 603	Strap	1
53	1 619 PS0 604	Label	1
54	1 619 PS0 605	Label	1
55	1 619 PS0 606	Pan head screw	1
56	1 619 PS0 607	HMI Housing	1

Spare parts list

Item	Part Number	Description	Illustration
57	1 619 PS0 608	Label	1
58	1 619 PS0 620	Spring	1
59	1 619 PS0 621	Retaining ring	1
183	1 619 PS2 755	Warning Label	1
651	1 619 PS0 610	Clip	1
801	1 619 PS0 699	Housing	1
803	1 619 PS0 611	Armature assembly	1
837	1 619 PS0 694	Planet Gear	1
838	1 619 PS0 693	Dowel pin	1