


Illustration - Type - E

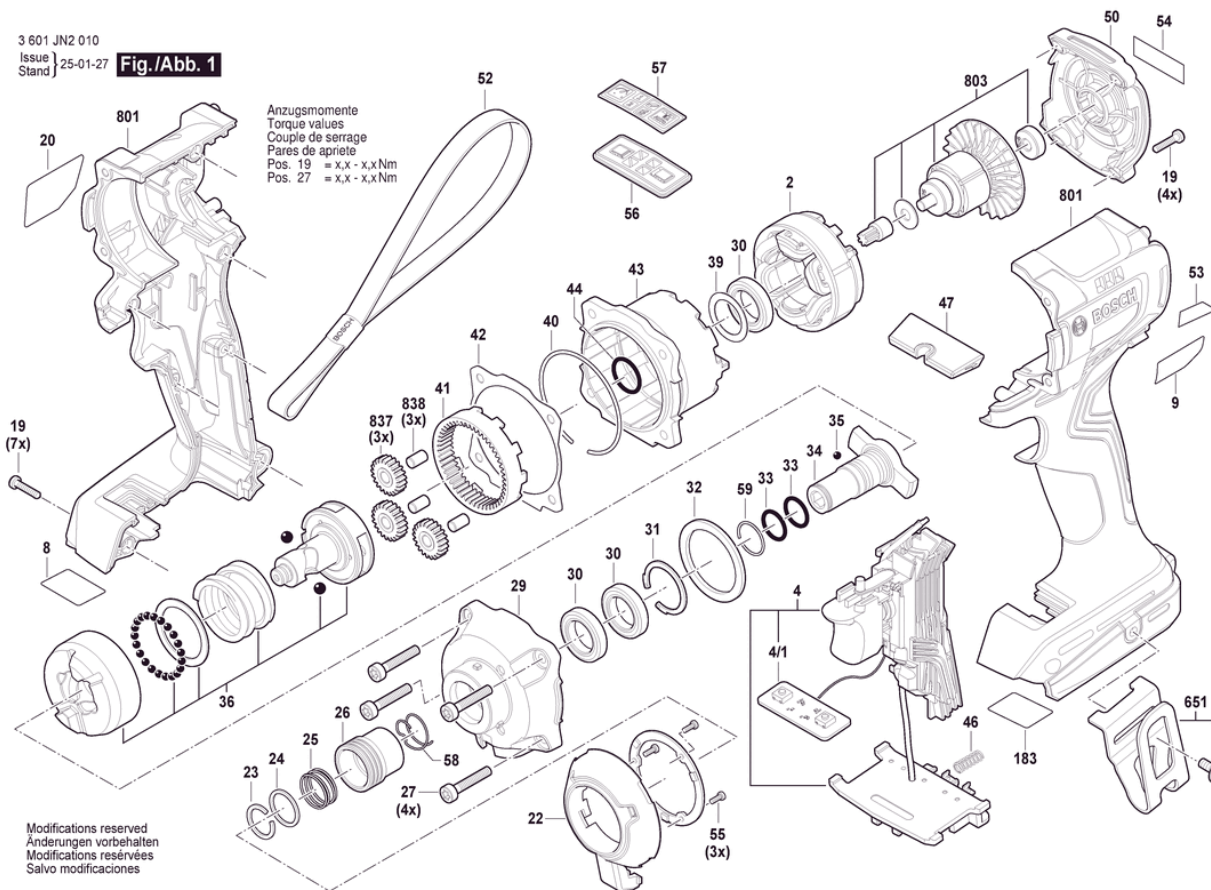

Spare parts list

Item	Part Number	Description	Illustration	Price	Quantity
2	1 619 PS0 571	Stator	1		1
4	1 619 PS2 209	Electronic Module	1	-	1
4/1	1 619 PS1 596	Electronic Module	1	-	1
8	1 619 PS1 774	Nameplate	1	-	1
9	1 619 PS1 776	Manufacturer's nameplate	1	-	1
19	1 619 PS0 575	Torx Flat-Head Screw	1		11
20	1 619 PS1 775	Warning Label	1	-	1
22	1 619 PS0 576	Cover	1		1
23	1 619 PS0 577	Retaining ring	1		1
24	1 619 PS0 578	Washer	1		1
25	1 619 PS0 579	Spring	1		1
26	1 619 PS0 617	Sleeve	1		1
27	1 619 PS0 581	Torx Flat-Head Screw	1		4
29	1 619 PS0 583	Gear Box	1		1
30	1 619 PS0 584	Ball Bearing	1		3
31	1 619 PS0 585	Retaining ring	1		1
32	1 619 PS0 586	Washer	1		1
33	1 619 PS0 587	O-Ring	1		2
34	1 619 PS0 618	Coupling Half	1		1
35	1 619 PS0 619	steel ball	1		1
36	1 619 PS0 590	Impact Mechanism	1		1
39	1 619 PS0 593	Washer	1		1
40	1 619 PS0 594	Retaining ring	1		1
41	1 619 PS0 595	Ring Gear	1		1
42	1 619 PS0 596	Sealing washer	1		1
43	1 619 PS0 597	Gear Housing	1		1
44	1 619 PS0 598	O-Ring	1		1
46	1 619 PS0 600	Spring	1		1
47	1 619 PS0 601	Reverse-Transfer Lever	1		1
50	1 619 PS0 602	End cap	1		1
52	1 619 PS0 603	Strap	1		1
53	1 619 PS0 604	Label	1		1
54	1 619 PS0 605	Label	1		1
55	1 619 PS0 606	Pan head screw	1		3
56	1 619 PS0 607	HMI Housing	1		1

Spare parts list					
Item	Part Number	Description	Illustration	Price	Quantity
57	1 619 PS0 608	Label	1		1
58	1 619 PS0 620	Spring	1		1
59	1 619 PS0 621	Retaining ring	1		1
183	1 619 PS2 755	Warning Label	1	-	1
651	1 619 PS0 610	Clip	1		1
801	1 619 PS0 699	Housing	1		1
803	1 619 PS0 611	Armature assembly	1		1
837	1 619 PS0 694	Planet Gear	1		1
838	1 619 PS0 693	Dowel pin	1		1