



### Illustration - Type - E

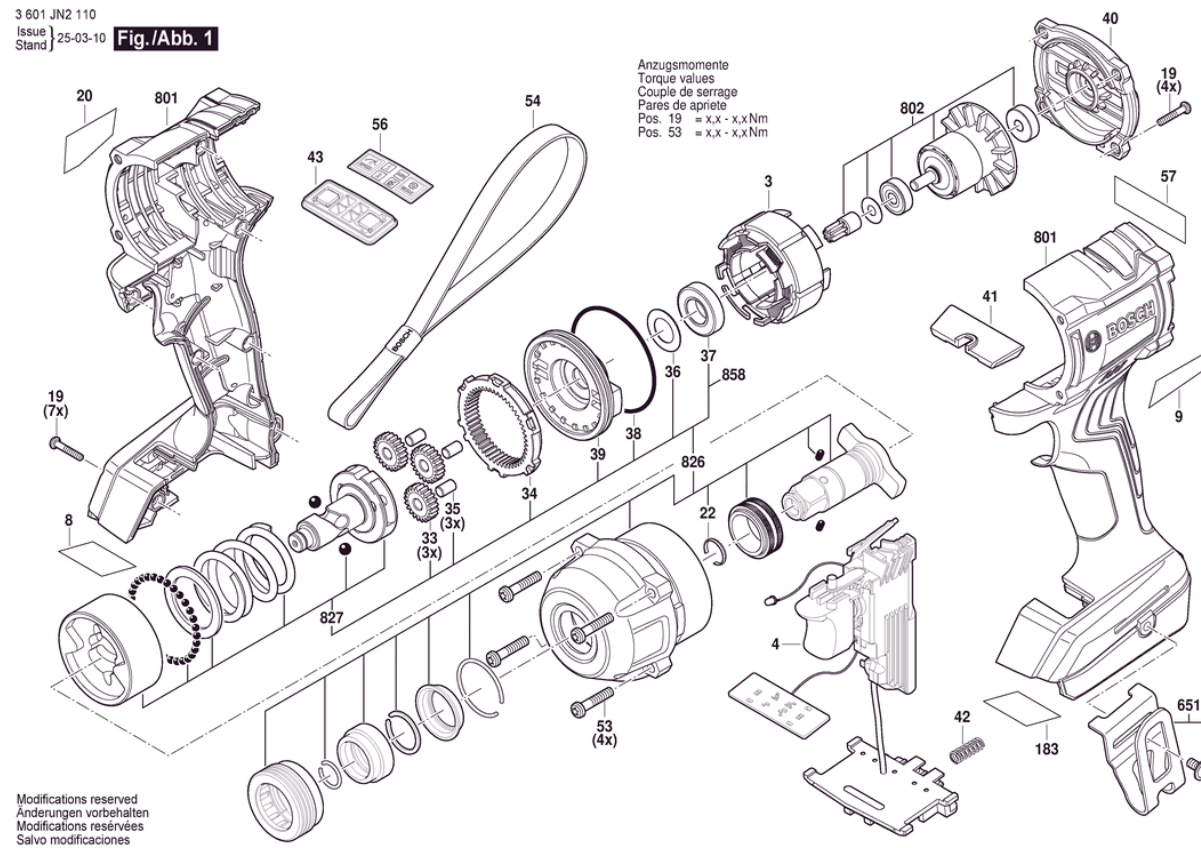

## Illustration - Type - E

3 601 JN2 110  
Issue | 24-12-03  
Stand | **Fig./Abb. 2**

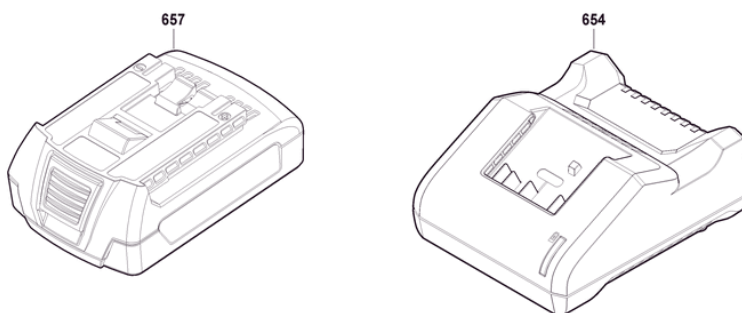

Modifications reserved  
Änderungen vorbehalten  
Modifications réservées  
Salvo modificaciones

## Spare parts list

| Item | Part Number   | Description                | Illustration |
|------|---------------|----------------------------|--------------|
| 3    | 1 619 PS0 928 | Stator                     | 1            |
| 4    | 1 619 PS3 197 | Switch                     | 1            |
| 8    | 1 619 PS1 598 | Nameplate                  | 1            |
| 9    | 1 619 PS1 597 | Manufacturer's nameplate   | 1            |
| 19   | 1 619 PS0 732 | Pan head screw             | 1            |
| 20   | 1 619 PS1 470 | Warning Label              | 1            |
| 22   | 1 619 PS0 934 | Retaining ring             | 1            |
| 33   | 1 619 PS0 935 | Planet Gear                | 1            |
| 34   | 1 619 PS0 936 | Ring Gear                  | 1            |
| 35   | 1 619 PS0 739 | Dowel pin                  | 1            |
| 36   | 1 619 PS0 740 | Washer                     | 1            |
| 37   | 1 619 PS0 741 | Ball Bearing               | 1            |
| 38   | 1 619 PS0 742 | O-Ring                     | 1            |
| 39   | 1 619 PS0 743 | Cover                      | 1            |
| 40   | 1 619 PS0 744 | End cap                    | 1            |
| 41   | 1 619 PS0 745 | Adjusting lever            | 1            |
| 42   | 1 619 PS0 746 | Compression Spring         | 1            |
| 43   | 1 619 PS0 747 | HMI Housing                | 1            |
| 53   | 1 619 PS0 748 | Pan head screw             | 1            |
| 54   | 1 619 PS1 827 | Strap                      | 1            |
| 56   | 1 619 PS0 937 | Label                      | 1            |
| 57   | 1 619 PS2 628 | Label                      | 1            |
| 183  | 1 619 PS2 625 | Warning Label              | 1            |
| 651  | 1 619 PS0 752 | Clip                       | 1            |
| 801  | 1 619 PS0 753 | Housing                    | 1            |
| 802  | 1 619 PS0 938 | rotator                    | 1            |
| 826  | 1 619 PS3 198 | Coupling Half              | 1            |
| 827  | 1 619 PS0 939 | Striker                    | 1            |
| 858  | 1 619 PS3 199 | Gear Housing               | 1            |
| 654  | 2 607 226 251 | Fast Charger               | 2            |
| 654  | 2 607 226 253 | Fast Charger GB GAL 18V-40 | 2            |
| 654  | 2 607 226 267 | Fast Charger CN GAL 18V-40 | 2            |
| 654  | 2 607 226 271 | Charger GAL 18V-40 4A      | 2            |
| 654  | 2 607 226 281 | Fast Charger               | 2            |

| Spare parts list |               |              |                                      |              |
|------------------|---------------|--------------|--------------------------------------|--------------|
| Item             | Part Number   | Description  |                                      | Illustration |
| 654              | 2 607 226 283 | Fast Charger | UK GAL 18V-20 220-240V / 2A / 12-18V | 2            |
| 654              | 2 607 226 297 | Fast Charger |                                      | 2            |
| 654              | 2 607 226 537 | Fast Charger | IND GAL 18V-40 220-240V / 4A         | 2            |
| 657              | 1 607 A35 0BG | Battery Pack |                                      | 2            |
| 657              | 1 607 A35 0MA | Battery Pack | GBA 18V 2.0AH                        | 2            |
| 657              | 1 607 A35 0V9 | Battery Pack |                                      | 2            |
| 657              | 1 617 S02 0T1 | Battery Pack |                                      | 2            |
| 657              | 1 617 S02 0T2 | Battery Pack |                                      | 2            |