



Spare parts list

Item	Part Number	Description	Illustration
3	1 619 PS2 169	Stator	1
4	1 619 PS0 954	Switch	1
8	1 619 PS0 955	Nameplate	1
19	1 619 PS0 732	Pan head screw	1
22	1 619 PS0 733	Retaining ring	1
23	1 619 PS0 734	O-Ring	1
24	1 619 PS0 735	O-Ring	1
25	1 619 PS0 736	Washer	1
33	1 619 PS0 737	Planet Gear	1
34	1 619 PS0 738	Ring Gear	1
35	1 619 PS0 739	Dowel pin	1
36	1 619 PS0 740	Washer	1
37	1 619 PS0 741	Ball Bearing	1
38	1 619 PS0 742	O-Ring	1
39	1 619 PS0 743	Cover	1
40	1 619 PS0 956	End cap	1
41	1 619 PS0 957	Lever	1
43	1 619 PS0 958	HMI Housing	1
45	1 619 PS0 943	PCB multiple	1
53	1 619 PS0 748	Pan head screw	1
56	1 619 PS0 959	Label	1
57	1 619 PS0 960	Label	1
58	1 619 PS0 961	Gear Housing	1
651	1 619 PS1 472	Torque bit	1
801	1 619 PS0 962	Housing	1
802	1 619 PS0 754	rotator	1
826	1 619 PS0 755	Coupling Half	1
827	1 619 PS0 756	Striker	1
858	1 619 PS0 963	Gear Housing	1