



BOSCH

Chain Saw

GKE 18V-20 | 3 600 HD7 1E0

Table of Content

Spare parts list.....	2
Illustration - Type.....	3

Spare parts list

Item	Part Number	Description	Illustration
1	1 619 PS3 698	Housing	1
2	1 619 PS3 699	Stator	1
3	1 619 PS3 700	Rotor	1
4	1 619 PS3 701	Printed-Board Assembly	1
5	1 609 280 477	Compression Spring	1
7	1 619 P01 678	Screw	1
12	2 603 490 022	Screw 4X16	1
13	1 619 PS3 702	Tool Guide	1
14	1 619 PS3 703	Spiked bumper	1
16	1 619 PS3 704	Gear Box	1
17	1 619 PS3 705	Locking Lever	1
18	1 619 PS3 706	Spring	1
19	1 619 PS3 707	Tensioning device	1
22	1 619 PS3 708	Tensioning Bracket	1
23	1 619 PS3 709	Sprocket wheel	1
24	1 619 PS4 731	Chain	1
25	1 619 PS4 732	Guide Bar	1
26	1 619 PS3 712	Lubrication System	1
27	1 619 PS3 714	Oil Pump	1
28	1 619 PS3 715	Guide bracket	1
29	1 619 PS3 723	Countersunk-Head Screw	1
30	1 619 PS3 716	Protective fence	1
31	1 619 PS3 717	Cover	1
32	1 619 P01 066	Torx Oval-Head Screw 4X25	1
33	1 619 PS4 730	Chain Guard	1
231	1 619 P00 443	Locking washer	1
261	1 619 PS3 713	Sealing Flange	1
808	1 619 PS5 147	Label	1

Illustration - Type - E

3 601 HD7 100
 Stand } 25-04-01
 Issue } **Fig. /Abb. 1**

