



HIKOKI

CORDLESS RECIPROCATING SAW CR18DBL

Item No.	Code No.	Description	No. Used	Remarks
1	305574	HEX. SOCKET HD. BOLT (W/SP.WASHER) M5X16	4	
2	371365	UPPER COVER	1	
3	319874	PACKING (B)	1	
4	371368	SPIRAL RETAINING RING D16	1	
5A	376619	BLADE HOLDER SET	1	
6	371381	SLEEVE	1	
8	371379	BLADE SPRING	1	
9	371377	BLADE HOLDER COVER	1	
10	371367	RETAINING RING FOR D13 SHAFT	1	
11	371371	PACKING WASHER	1	
12	371370	FELT PACKING	1	
13	371363	SEAL SLEEVE	1	
14	371369	O-RING	1	
15	371362	METAL (B)	2	
16	371366	PLUNGER (A)	1	
17	371380	PIN	1	
18	371382	BASE	1	
19	371374	BLADE LAVER SHAFT	1	
20	371375	BLADE LEVER SPRING	1	
21	371373	BLADE LEVER	1	
22	371386	FRONT COVER	1	
23	371383	BASE PLATE	1	
24	332662	HEX. SOCKET BOLT M5X12	2	
25	949216	MACHINE SCREW M4X10 (10 PCS.)	1	
26	371929	DISTANCE PIECE	1	
27	371385	FRONT PLATE (A)	1	
28	371384	BASE LEVER	1	
29A	328707	TAPPING SCREW (W/FLANGE) D5X30 (BLACK)	4	
30	371364	HOLDER COVER (B)	2	
31	371989	SEAL LOCK HEX. SOCKET HD. BOLT M5X14	4	
32	371990	SEAL LOCK HEX. SOCKET HD. BOLT M4X12	3	
33	371360	BEARING COVER (B)	1	
34	6901VV	BALL BEARING 6901VV	1	
35	371359	SPINDLE	1	
36	371372	SEAL PACKING (A)	1	
37	983541	CONNECTING PIECE (A)	1	
38	324470	NEEDLE ROLLER	1	
39	371991	SEAL LOCK HEX. SOCKET HD. BOLT M6X20	1	
40	371361	GEAR	1	
41	371358	GEAR COVER	1	
42	339250	TAPPING SCREW (W/FLANGE) D4X20	10	
43	371387	HOOK	1	
44	371992	SEAL LOCK HEX. SOCKET HD. BOLT M5X10	2	
45	361062	ROTOR ASS'Y	1	INCLUD. 46
46	606ZZM	BALL BEARING 606VV	1	
47	340968	STATOR FET PCB ASS'Y	1	INCLUD. 49
48	951039	MACHINE SCREW (W/SP. WASHER) M4X12	2	
49	371357	CONTROLLER TERMINAL SET	1	
50	319760	PUSHING BUTTON	1	
51	371356	HANDLE DAMPER	4	
52		NAME PLATE	1	
*53B	371994	HOUSING SET	1	
54	371995	HANDLE SET	1	

* ALTERNATIVE PARTS



CORDLESS RECIPROCATING SAW CR18DBL

Item No.	Code No.	Description	No. Used	Remarks
*55	335790	BATTERY BSL 1850 (EUROPE,AUS,NZL)	2	INCLUD.504
		STANDARD ACCESSORIES		
*501A	370683	CURVED BLADES NO.141(S)150L P.14(3 PCS.)	1	
*502		CHARGER (MODEL UC 18YFSL)	1	
503	371355	CASE	1	
504	329897	BATTERY COVER	1	
		OPTIONAL ACCESSORIES		
601	959611	SABER SAW BLADES NO.4 (5 PCS.)	1	
602	958185	SABER SAW BLADES NO.5 (5 PCS.)	1	
603	959799	SABER SAW BLADES NO.95 (3 PCS.)	1	
604	959800	SABER SAW BLADES NO.96 (3 PCS.)	1	
605	318611	SABER SAW BLADES NO.101 150L P.10 (5 PCS	1	
606	318612	SABER SAW BLADES NO.102 228L P.10 (5 PCS	1	
607	318613	SABER SAW BLADES NO.103 150L P.14 (5 PCS	1	
608	318614	SABER SAW BLADES NO.104 228L P.14 (5 PCS	1	
609	318617	SABER SAW BLADES NO.107 150L P.24 (5 PCS	1	
610	318618	SABER SAW BLADES NO.108 228L P.24 (5 PCS	1	
611	324818	SABER SAW BLADES NO.109 150L P.18 (5 PCS	1	
612	324819	SABER SAW BLADES NO.110 228L P.18 (5 PCS	1	
613	318619	SABER SAW BLADES NO.121 305L P.6 (5 PCS.)	1	
614	318620	SABER SAW BLADES NO.131 305L P.10/14(5PC	1	
615	318621	SABER SAW BLADES NO.132 203L (5 PCS.)	1	
616A	370684	CURVED BLADES NO.142(S)200L P.14(3 PCS.)	1	
617A	370685	CURVED BLADES NO.143(S)250L P.14(3 PCS.)	1	
618A	376618	SERVICE KIT (CR 18DBL)	1	INCLUD.4,5A,6,8,9,17,19-21

* ALTERNATIVE PARTS