



HIKOKI

CORDLESS DRIVER DRILL DS18DDQ

| Item No. | Code No. | Description | No. Used | Remarks |
|----------|----------|--|----------|----------------|
| 1 | 379245 | CHUCK ADAPTER SET | 1 | |
| 2 | 379936 | GEAR BOX SET | 1 | |
| 3 | 313687 | TAPPING SCREW (W/FLANGE) D3X16 (BLACK) | 8 | |
| 4 | | NAME PLATE | 1 | |
| 5 | 376360 | WIRING ASS'Y | 1 | INCLUD.7,9 |
| 6 | 374399 | PUSHING BUTTON | 1 | |
| 7 | 376362 | DC-SPEED CONTROL SWITCH | 1 | |
| 8 | 374382 | SHIFT KNOB | 1 | |
| 9 | 376361 | BATTERY TERMINAL | 1 | |
| 10 | 376357 | HOUSING (A).(B) SET | 1 | |
| *11 | 377796 | BATTERY BSL 1820M (EUROPE,AUS,NZL) | 2 | INCLUD.505 |
| *11 | 376029 | BATTERY BSL 1850C (EUROPE,AUS,NZL) | 2 | INCLUD.505 |
| | | STANDARD ACCESSORIES | | |
| 501 | | CHARGER (MODEL UC 18YFSL) | 1 | |
| 502 | 379246 | BIT ADAPTER SET | 1 | |
| 503 | 379247 | ANGLE ADAPTER SET | 1 | |
| 504 | 379248 | OFFSET ADAPTER SET | 1 | |
| 505 | 329897 | BATTERY COVER | 1 | |
| 506 | 992671 | + DRIVER BIT (B) NO.2 50L | 1 | |
| 507 | 376358 | HOOK SET | 1 | |
| 508 | 336471 | CASE ASS'Y (STACKABLE 2) | 1 | INCLUD.509-511 |
| 509 | 336472 | LATCH | 4 | |
| 510 | 336473 | HANDLE | 1 | |
| 511 | 336474 | HINGE | 2 | |
| 512 | 379249 | INNER TRAY | 1 | |

* ALTERNATIVE PARTS