

EXPLODED VIEW

and SPARE PARTS LIST of RDP-SRH20 SOLO

| | | |
|-----|---------------------------|----|
| 1. | Dust cover | 1 |
| 2. | round wire | 1 |
| 3. | Cover | 1 |
| 4. | Shim | 1 |
| 5. | Gear Box | 1 |
| 6. | bracket | 1 |
| 7. | bearing-HK0908 | 1 |
| 8. | bearing-HK0608 | 1 |
| 9. | screw | 1 |
| 10. | motor gear | 1 |
| 11. | motor | 1 |
| 12. | inductance | 2 |
| 13. | rubber strip-1 | 1 |
| 14. | Chassis cover | 1 |
| 15. | tapping screw | 13 |
| 16. | switch | 1 |
| 17. | lock off lever | 1 |
| 18. | tapping screw | 1 |
| 19. | Fuselage protection board | 1 |
| 20. | Bracket | 1 |
| 21. | LED Cover | 1 |
| 22. | 5LED | 1 |
| 23. | Circlip for shaft | 1 |
| 24. | rubber strip-2 | 1 |
| 25. | Bottom of the chassis | 1 |
| 26. | seal ring | 1 |
| 27. | Button | 1 |
| 28. | spring | 1 |
| 29. | Button | 1 |

