


EXPLODED VIEW and SPARE PARTS LIST of RDP-SBRH20

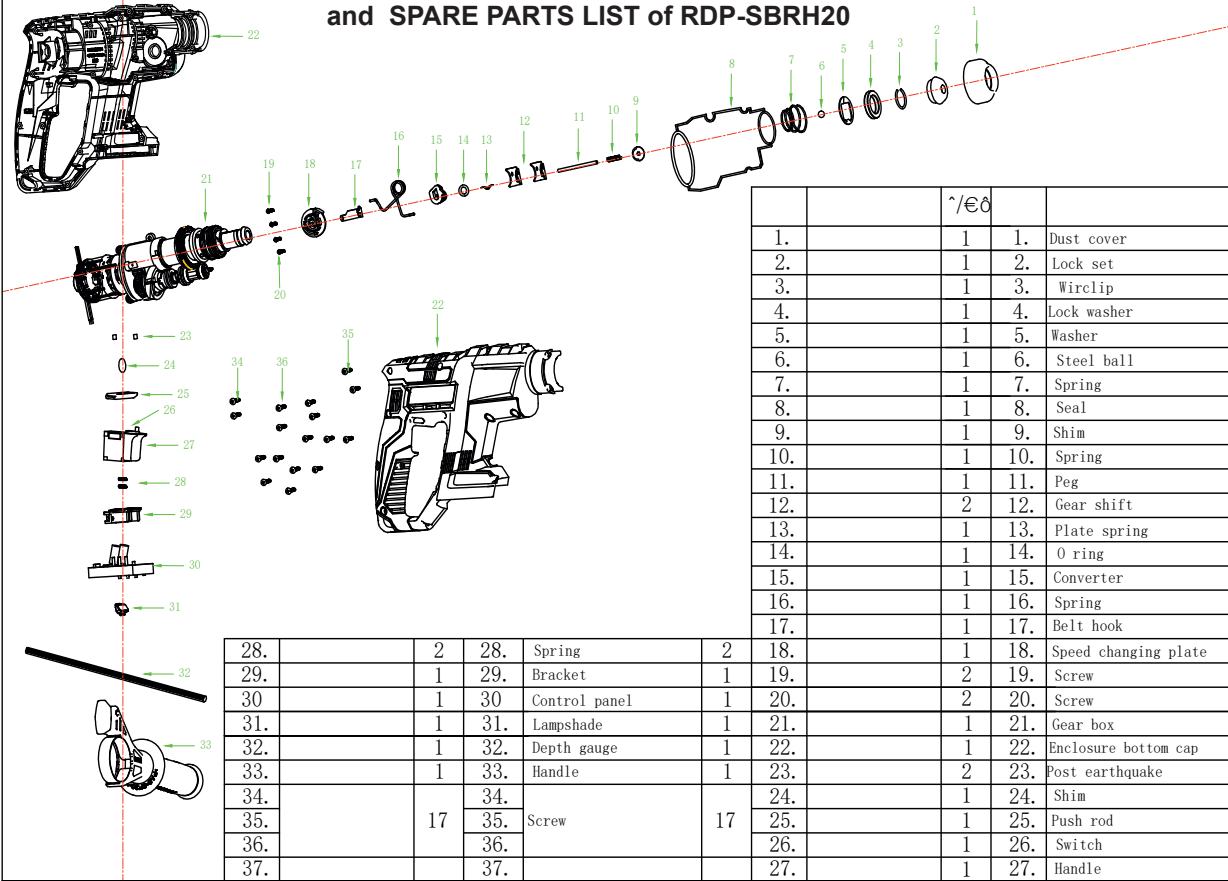

				~/€0		~/€0
1.		1	1.	Dust cover	1	1
2.		1	2.	Lock set	1	1
3.		1	3.	Wirclip	1	1
4.		1	4.	Lock washer	1	1
5.		1	5.	Washer	1	1
6.		1	6.	Steel ball	1	1
7.		1	7.	Spring	1	1
8.		1	8.	Seal	1	1
9.		1	9.	Shim	1	1
10.		1	10.	Spring	1	1
11.		1	11.	Peg	1	1
12.		2	12.	Gear shift	2	2
13.		1	13.	Plate spring	1	1
14.		1	14.	O ring	1	1
15.		1	15.	Converter	1	1
16.		1	16.	Spring	1	1
17.		1	17.	Belt hook	1	1
18.		1	18.	Speed changing plate	1	1
19.		2	19.	Screw	2	2
20.		2	20.	Screw	2	2
21.		1	21.	Gear box	1	1
22.		1	22.	Enclosure bottom cap	1	1
23.		2	23.	Post earthquake	2	2
24.		1	24.	Shim	1	1
25.		1	25.	Push rod	1	1
26.		1	26.	Switch	1	1
27.		1	27.	Handle	1	1
28.		2	28.	Spring	2	2
29.		1	29.	Bracket	1	1
30.		1	30.	Control panel	1	1
31.		1	31.	Lampshade	1	1
32.		1	32.	Depth gauge	1	1
33.		1	33.	Handle	1	1
34.			34.	Screw		
35.	17		35.	Screw	17	17
36.			36.	Screw		
37.			37.	Screw		