



RDP-SHM20

Exploded view

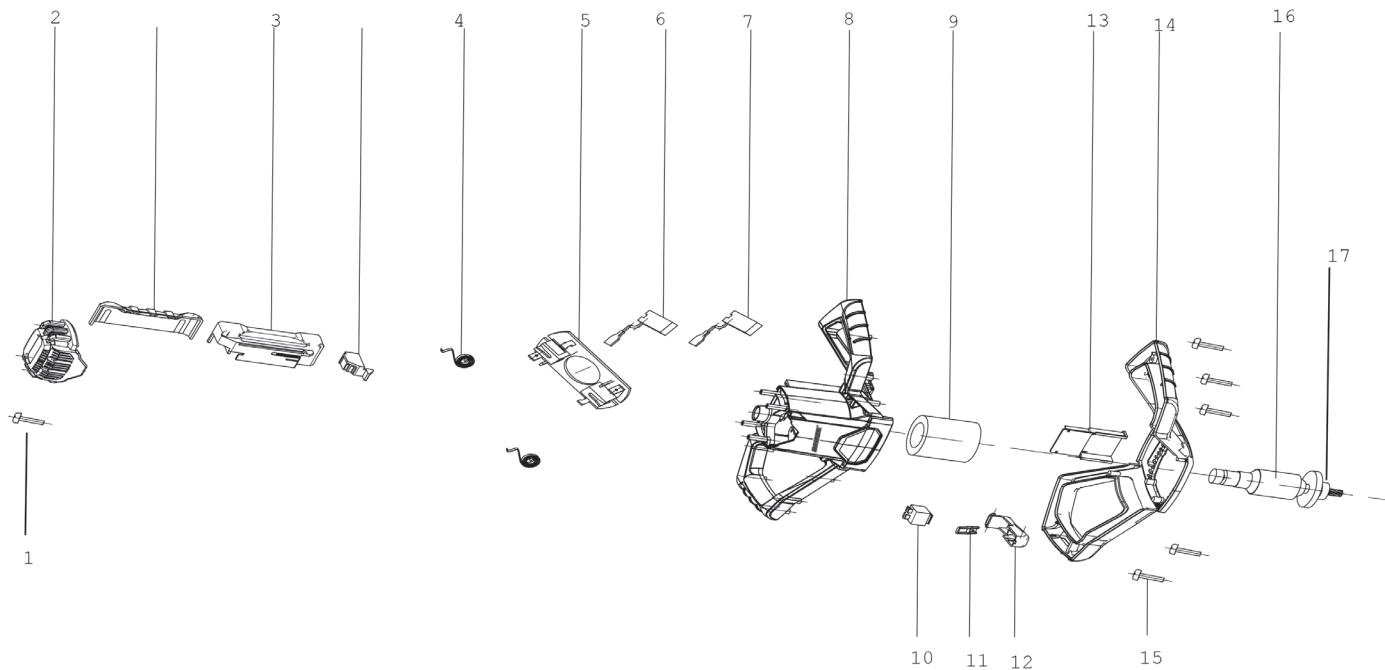

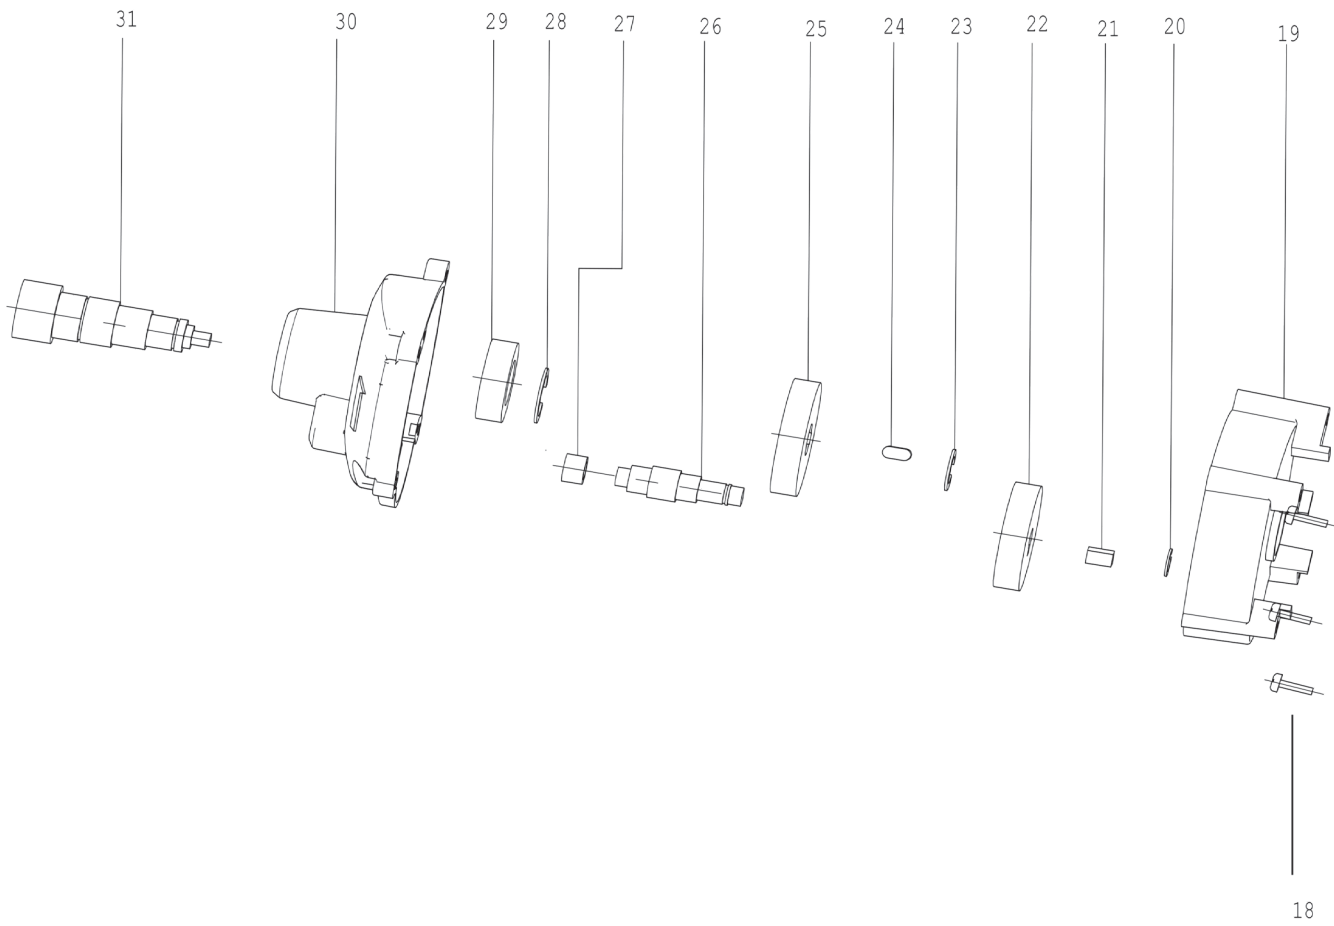

RDP-SHM20

Spare parts list

No.	Parts	QTY	MATERIAL
1	screw $\phi 4 \times 14$	4	
2	After the motor cover	1	PA6GF30
3	The battery	1	
4	Carbon brush spring	2	
5	Brush holder	1	
6	Carbon brush	1	
7	Carbon brush	1	
8	On the chassis	1	PA6GF30
9	The stator	1	
10	switch	1	ABS
11	spring	1	
12	Switch button	1	ABS
13	The battery socket	1	PA6GF30
14	The chassis	1	PA6GF30
15	screw M4*65	2	
16	The rotor	1	
17	bearing 6000	1	
18	screw $\phi 5 \times 60$	4	
19	Gear box	1	
20	circlip	1	
21	3 Woodruff key	1	
22	Helical gear	1	
23	circlip	1	
24	Flat key	1	
25	Big gear	1	
26	Gear shaft	1	
27	Shaft sleeve	1	
28	Shaft card	1	
29	bearing 6003	1	
30	Gear case cover	1	
31	The spindle	1	