


## EXPLODED VIEW

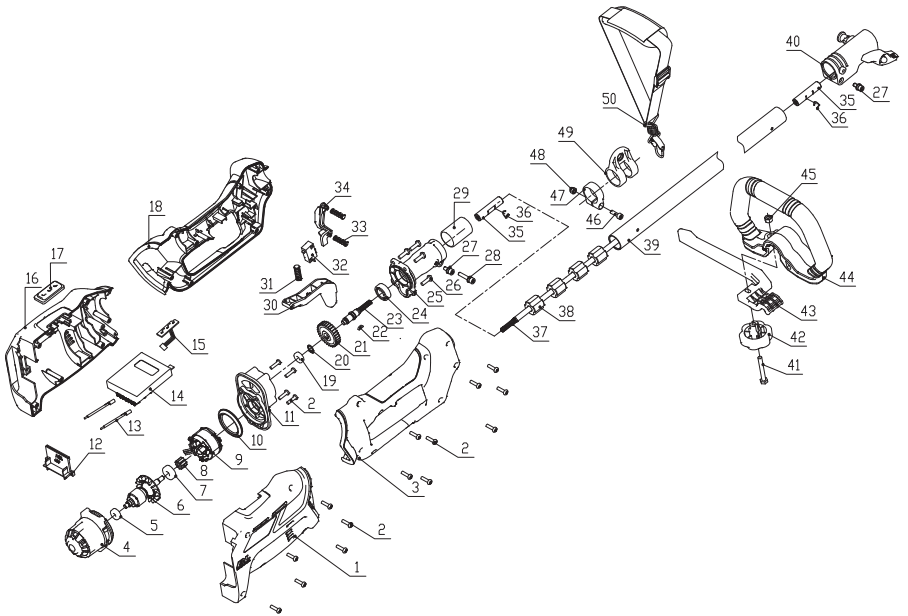

## SPARE PARTS LIST

No.	Description	Qty
1	left housing-1	1
2	screw ST4x16	20
3	right handle	1
4	motor cover	1
5	bearing 606	1
6	rotor	1
7	bearing 608	1
8	small gear	1
9	stator	1
10	windshield	1
11	gear box	1
12	insert plate seat	1
13	connecting line	2
14	controller assy	1
15	light board	1
16	left housing-2	1
17	indicator board	1
18	left handle	1
19	bearing 697	1
20	retainer ring	1
21	big gear	1
22	key	1
23	output shaft	4
24	bearing 6000	1
25	gear box cover	1
26	screw ST5x16	4
27	screw M5x12	1
28	screw M5x25	1
29	rubber sleeve	1
30	trigger	1
31	trigger spring	1
32	micro switch	1
33	pushing rod spring	2
34	self lock button	1
35	connecting set	2
36	circlip	2
37	front hard axle	1
38	oil bearing	4
39	front aluminum pipe	1
40	aluminum connector	1
41	bolt M6x45	1
42	knob	1
43	handle	1
44	front handle	1
45	nut M6	1
46	screw M5x16	1
47	hanger ring	1
48	nut M5	1
49	clasp	1