

EXPLODED VIEW AND SPARE PARTS LIST

| | | |
|-----|--------------------------|----|
| 1. | Left handed thread screw | 1 |
| 2. | Drill chuck | 1 |
| 3. | Torque Setting Ring | 1 |
| 4. | Variable speed ring | 1 |
| 5. | Gear box | 1 |
| 6. | Speed changing plate | 1 |
| 7. | Shrapnel | 1 |
| 8. | Plate spring | 1 |
| 9. | Switch lock button | 1 |
| 10. | Inductors | 2 |
| 11. | Magnetic ring | 1 |
| 12. | Switch | 1 |
| 13. | LED | 1 |
| 14. | Tapping screw | 1 |
| 15. | Protective plate | 1 |
| 16. | Battery Clip | 1 |
| 17. | Nut | 2 |
| 18. | Belt hook | 1 |
| 19. | Tapping screw | 1 |
| 20. | Lampshade | 1 |
| 21. | The magnet | 2 |
| 22. | Screwdriver head | 1 |
| 23. | Enclosure bottom cap | 1 |
| 24. | Tapping screw | 10 |

