


EXPLODED VIEW AND SPARE PARTS LIST

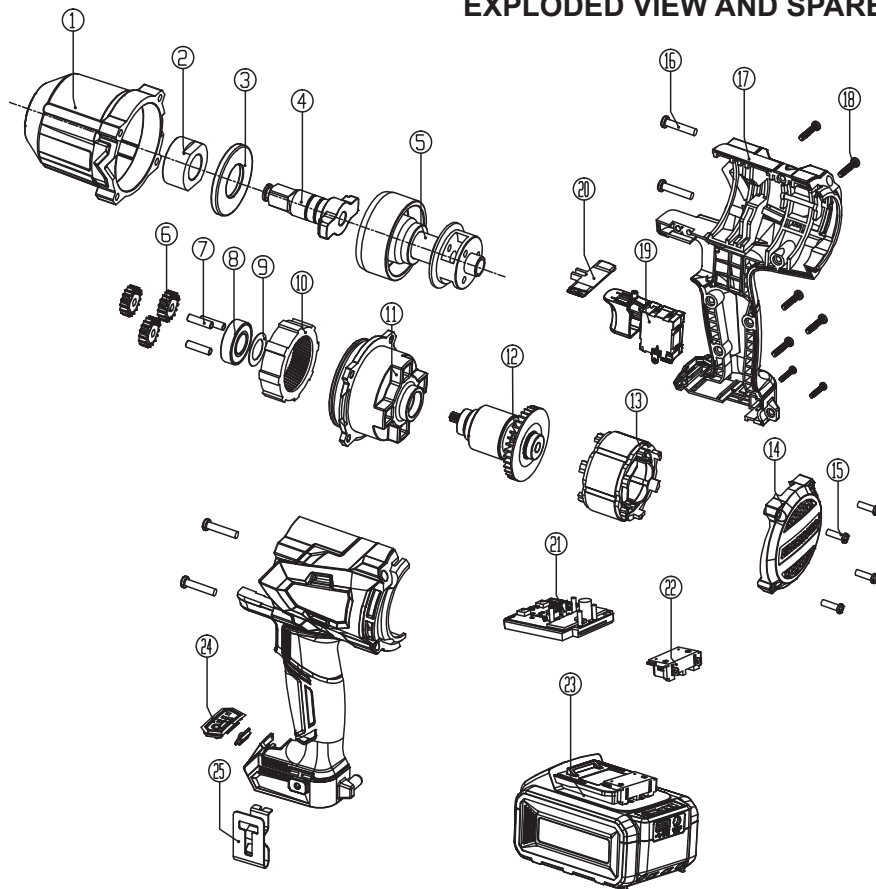

1	Aluminum head shell	1	ZALS112
2	axle sleeve	1	
3	Output shaft gasket	1	
4	Output axis	1	20CRMO
5	Hit Block Component	1	20CRMO
6	Planetary teeth	3	
7	pin	3	CR15
8	pillow	1	
9	gasket	1	
10	Inner ring	1	SMF5030
11	Tooth back cover	1	ZALS112
12	Electronic rotor	1	
13	Electronic stator	1	
14	Tail cover	1	PA6-GF30
15	Self-propelled screw	4	45#
16	Self-propelled screw	4	45#
17	Shell	1	PA6-GF30
18	Self-propelled screw		
19	switch	1	
20	push rod	1	ABS
21	Control panel	1	
22	Large body bracket	1	
23	Battery pack	1	
24	Speed adjustment	1	
25	A belt buckle	1	