


EXPLODED VIEW AND SPARE PARTS LIST

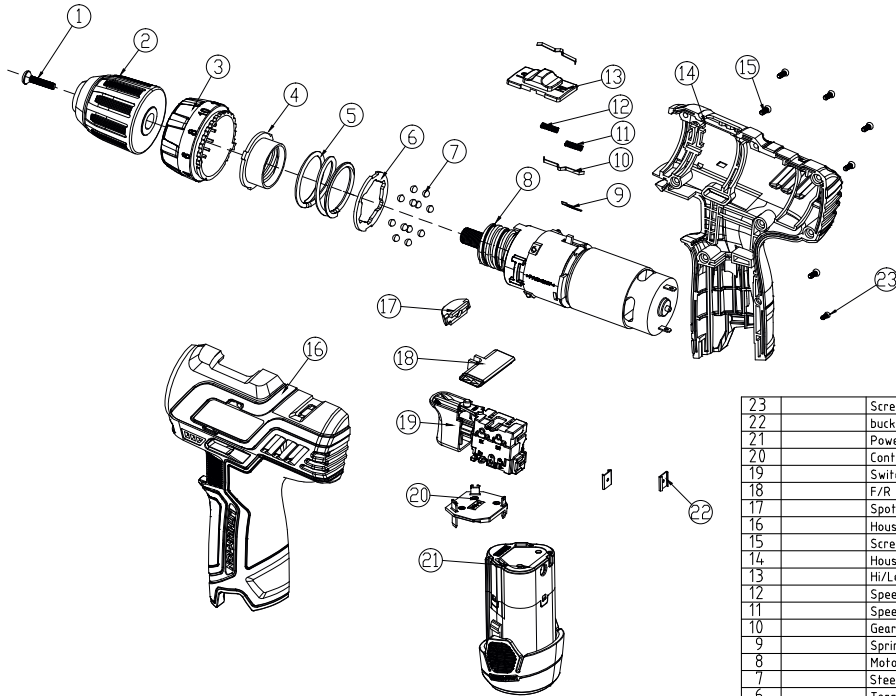

23	Screw\ST2.5x12	1	
22	buckle	2	
21	Power Pack ass'y	1	
20	Contact holder ass'y	1	
19	Switch	1	
18	F/R Lever	1	
17	Spotlight Cover	1	
16	Housing Support	1	
15	Screw\ST3x14	6	
14	Housing Cover	1	
13	Hi/Lower Speed Change Konb	1	
12	Speed Change Spring/Ø0.5	1	
11	Speed Change Spring/Ø0.6	1	
10	Gear shrapnel	2	
9	Spring Plate	1	
8	Motor & Gear Box Ass'y	1	
7	Steel ball\SØ4.0	16	
6	Torque Control Washer	1	
5	Torque Control Spring	1	
4	Sleeve	1	
3	Clutch Cap	1	
2	Chuck	1	
1	M Screw (LH)\M5x22	1	
ITEM	PART NO.	DESCRIPTION	Q.TY

A

B