


EXPLODED VIEW

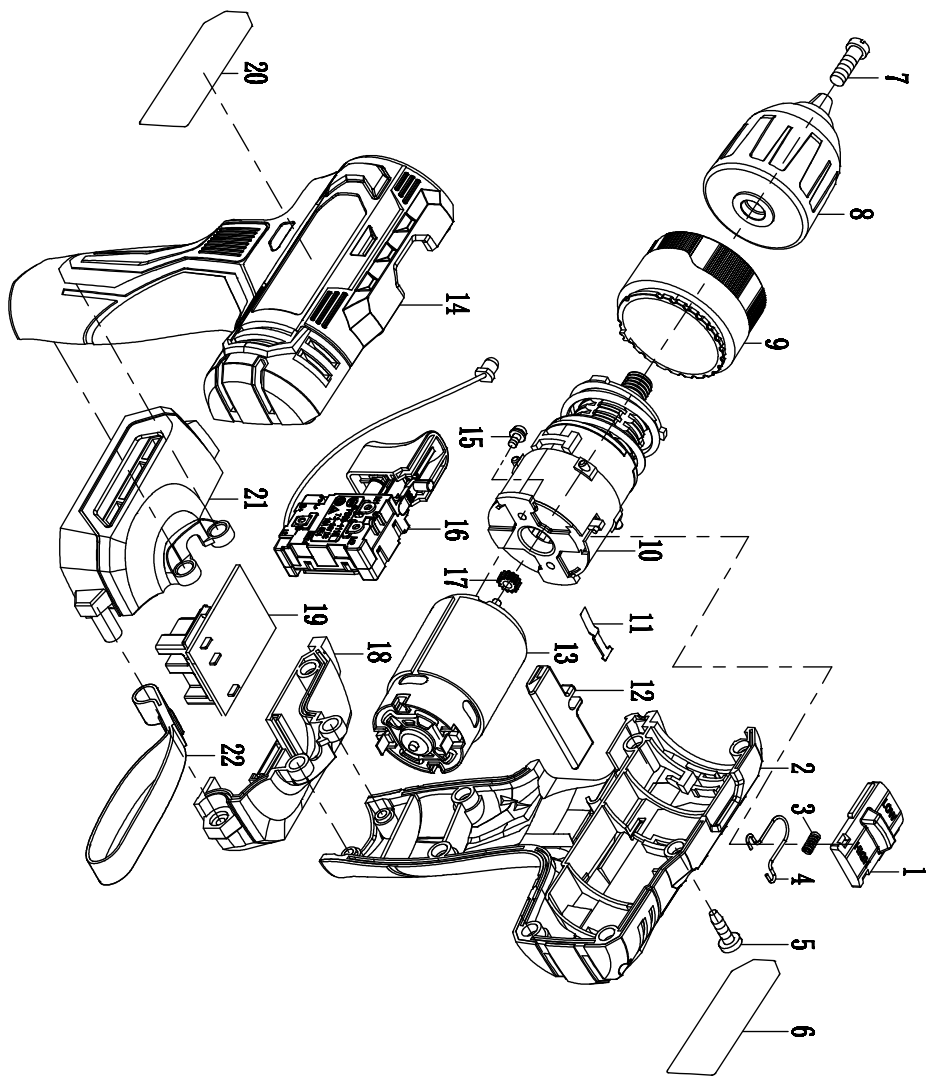

spare parts list

NO.	Description	Quantity
1	High and low speed push button	1
2	right house	1
3	push button spring	1
4	Speed control push button wire	1
5	screw M3X12	11
6	nameplate	1
7	screw (left tooth) M5X22	1
8	Plastic drill chuck	1
9	Torque Cup	1
10	Gearbox	1
11	Torsion Cup Shrapnel	1
12	Left and right dial buttons	1
13	motor	1
14	left house	1
15	screw M3X10	2
16	Switch assembly (with light)	1
17	motor gear	1
18	Right house foot plate	1
19	battery pack pins	1
20	trademark	1
21	Left house foot plate	1
22	lanyard	1