


# EXPLODED VIEW

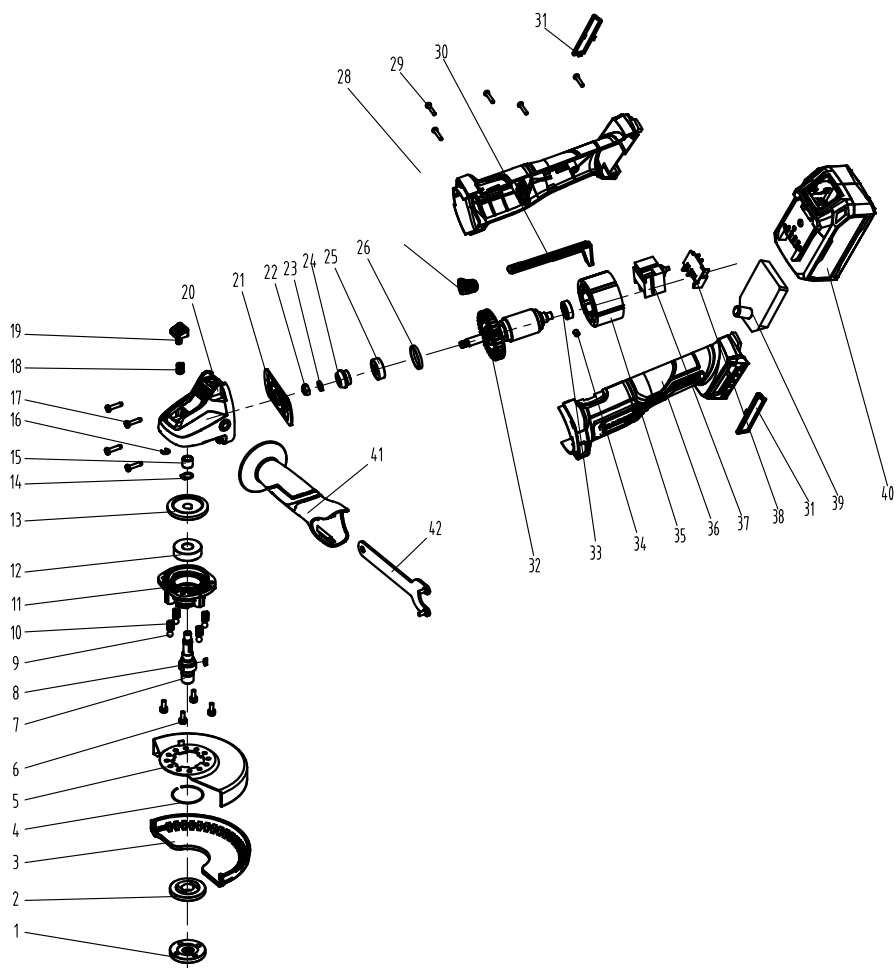

## SPARE PARTS

No.	Description
1	Wheel nut
2	Locating washer
3	Guarder cover
4	O Ring
5	Wheel guarder
6	Screw and washher asmM4×14
7	Spindle
8	Woodruff key 3×10
9	Steel ball Sφ6.75
10	Spring
11	Fore cover
12	Bearing 6201-2RS
13	Big gear
14	Shaft circlip 10
15	Oil bearing φ12×φ8×8
16	Split circlip 5
17	Screw ST4.2×20
18	Pin spring
19	Self-locking pin
20	Gear box
21	bearing-washer
22	M6-Nut
23	spring-washer
24	Little gear
25	Bearing-608
26	
27	Button
28	House-left
29	Screw
30	switch puller
31	Window
32	Rotor
33	Bearing-607
34	Rubber shock absorber structurer
35	Stator
36	house-right
37	switch
38	pin-battery
39	Controller
40	Battery pack
41	Side handle
42	Spanner