

Nº	description	
1	handle assy	
2	cable clip	
3	plate	
4	grass bag top cover	
5	flat washer	
6	grass bag	
7	screw 4x16	
8	grass bag support	
9	rear blanking cap	
10	nut cover	
11	cotter	
12	flat washer	
13	rear wheel 8"	
14	rear wheel axle	
15	screw 5x16	
16	front wheel axle pressing plate	1
17	cover	
18	deck	-
19	fan	-
20	blade	-
21	blade screw M10*23	
22	right deck decorative cover	
23	front wheel 6" front wheel axle	
24		
25	balance weight nut M6	-
20	front connectong rod	-
27	height adjusting tension spring	-
29	left deck decorative cover	-
30	self lock pin	-
31	tension spring pressing plate	1
32	motor assy	1
33	screw 6.3*25	1
34	flat washer	1
35	connecting rod axle	1
36	connecting rod support	1
37	height adjusting torsion spring	1
38	height adjusting rod	1
39	rear connectong rod	1
40	bolt M6x65	]
41	left handle fixed seat	
42	cable pressing plate	
43	right handle fixed seat	
44	pressing plate	
45	knob nut	1

46	pressing plate
48	bolt M6x50
49	lower handle
50	nut M4
51	top cover
52	front decorative cover
	dust proof mat
53	height adjusting plate
54	bolt M4x16
55	height adjusting handle
56	transparency cover
57	transparency cover torsion spring
58	long pin
59	play pin spring
60	short pin
61	key
62	key hanger
63	screw 4*10
64	top handle
65	rear cover
66	rear cover torsion spring
67	rear cover axle
68	battery case assy
69	screws
70	grass bag handle
71	height adjusting handle

49 lower handle

pressing plate

handle fixing cover

51 top cover

46

47