


Illustration - Type - E

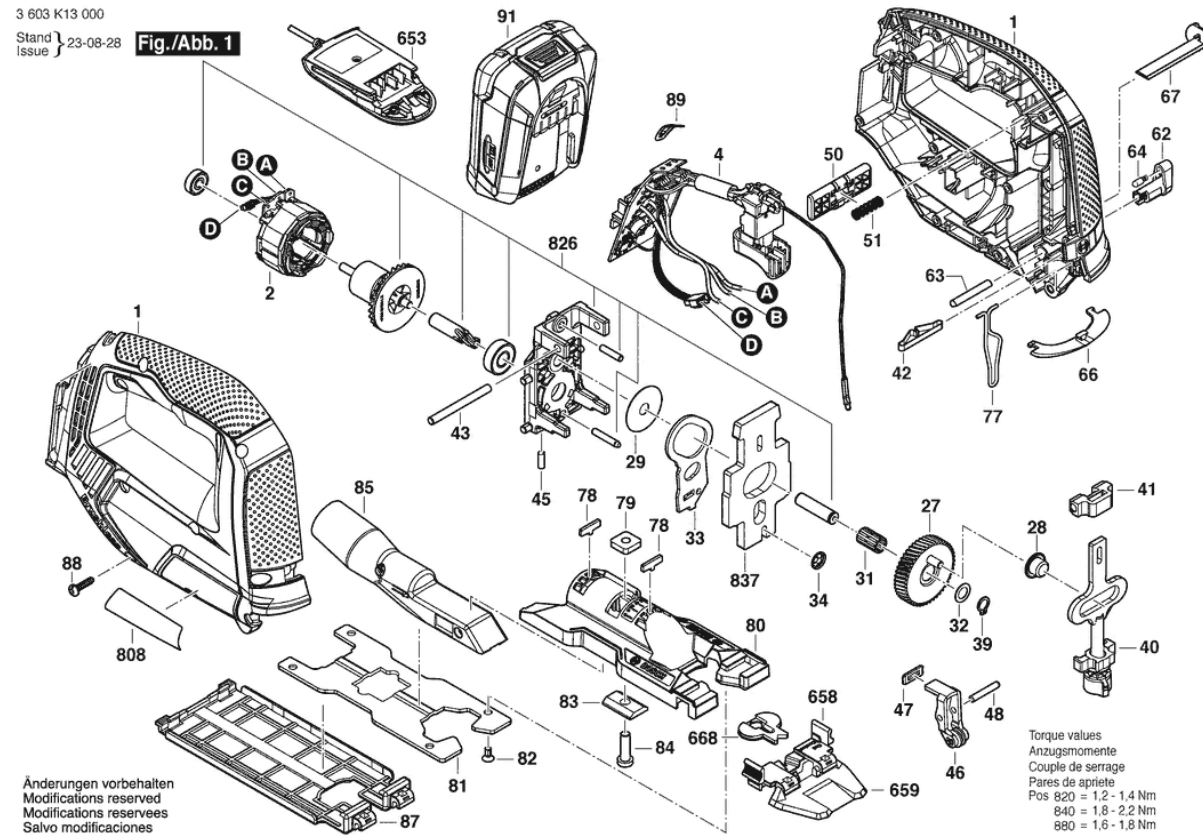

Spare parts list

Item	Part Number	Description	Illustration
1	1 605 806 6E7	Housing	1
2	1 600 A01 6YW	Stator	1
4	1 600 A02 B6T	Electronic Assembly	1
27	1 600 A02 7Z7	Eccentric Cog Wheel	1
28	2 600 914 022	Needle bearing	1
29	2 600 101 048	Shim 0,5 MM	1
31	2 600 913 040	Needle-Roller Assembly	1
33	2 601 923 012	Fork Lever	1
34	1 600 A00 8C6	Retaining Washer	1
39	1 600 A02 3S8	Retaining Washer	1
40	2 600 780 149	Lifting Rod	1
41	2 605 801 038	Plain bearing	1
42	1 604 612 01E	Compression Spring	1
43	2 603 201 089	Needle Roller	1
45	2 603 105 084	Bearing bolt	1
46	2 609 001 608	Roller Lever	1
47	2 601 015 077	Sealing Plate	1
48	2 609 002 725	Straight Pin	1
50	1 600 A02 2BD	Lever	1
51	2 609 004 223	Spring	1
62	1 600 A02 AX2	Change-Over Switch	1
63	2 603 124 155	Control Shaft	1
64	1 600 A01 BV3	Ratchet Cap	1
66	1 600 A02 AX3	Lens	1
67	1 600 A02 AX4	Switch Slide	1
77	2 609 003 350	Protecting Cover BLACK	1
78	2 601 030 166	Adjusting Pin	1
79	2 600 040 004	fixing plate	1
80	1 600 A02 AX5	Base Plate	1
81	1 600 A02 AX6	Work Board	1
82	2 603 421 014	Thread-forming tap. Screw	1
83	2 601 030 019	Profile Beading	1
84	1 600 A02 343	Torx socket button screw M6X20 ZN/NI	1
85	1 600 A02 UF9	Suction Nozzle	1
87	2 609 003 553	Pad	1

Spare parts list

Item	Part Number	Description	Illustration
88	2 603 490 022	Screw 4X16	1
89	1 601 11C 5H5	Sticker	1
91	1 607 A35 0JM	Battery Pack	1
91	1 607 A35 0RP	Battery Pack	1
91	1 607 A35 0RU	Battery Pack	1
91	1 607 A35 1C9	Battery Pack	1
653	2 607 226 517	Charger	1
653	2 607 226 519	Charger	1
658	2 609 003 511	Support	1
659	2 609 003 512	Window	1
668	2 601 016 065	Splintering Protector	1
808	1 601 11A A5H	Nameplate	1
826	1 607 000 F2U	Drive Assembly	1
837	2 601 098 098	Counterweight	1