


# RDP-ID32 Exploded view & Spare Parts List

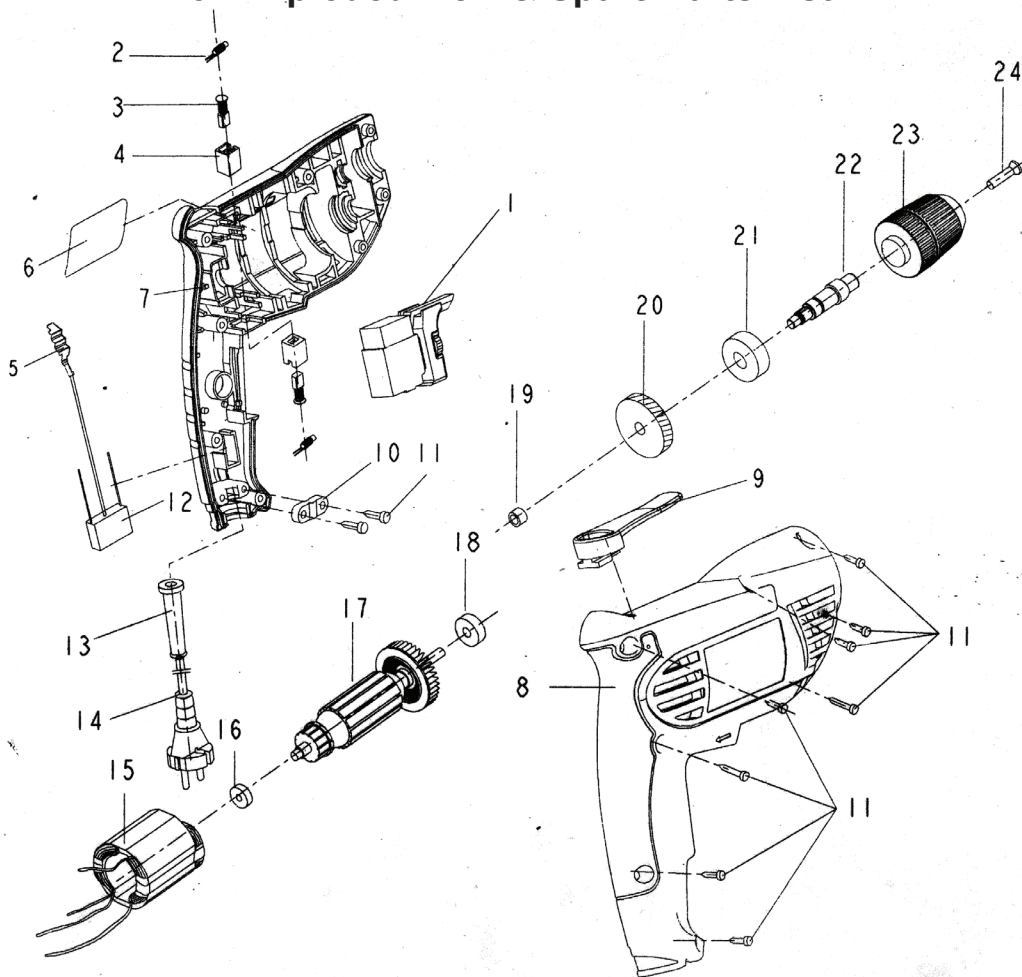

Parts No.	Description
1	Switch
2	Inductor
3	Carbon brush
4	Brush holder
5	Flake
6	Lable
7	Housing-left
8	Housing-right
9	Draft bar
10	Cable clip
11	Tapping screw
12	Capacitor
13	Cable arbor
14	Cable
15	Stator
16	Bearing 626
17	Rotor
18	Bearing 627
19	Bearing
20	Gear
21	Bearing 6000
22	Output spindle
23	Chuck
24	Screw