

RD-ID36 Exploded view & Spare Parts List

Parts No.	Description	Qty
1	screw	1
2	chuck	1
3	spindle	1
4	spring	1
5	steel ball	1
6	impact pin	1
7	button	1
8	right housing	1
9	screw	11
10	bearing	1
11	bearing	1
12	circlip	1
13	gear	1
14	circlip	1
15	bearing	1
16	impact block	1
17	bearing	1
18	rotor	1

Parts No.	Description	Qty
19	bearing	1
20	stator	1
21	brush holder	2
22	carbon brush	2
23	brush cover	2
24	switch button	1
25	switch	1
26	screw	2
27	cable fixer	1
28	cable sheath	1
29	cable	1
30	screw	1
31	ruler	1
32	handle connector	1
33	handle	1
34	nut	1
35	chuck spanner	1
36	left housing	1

