


Exploded view

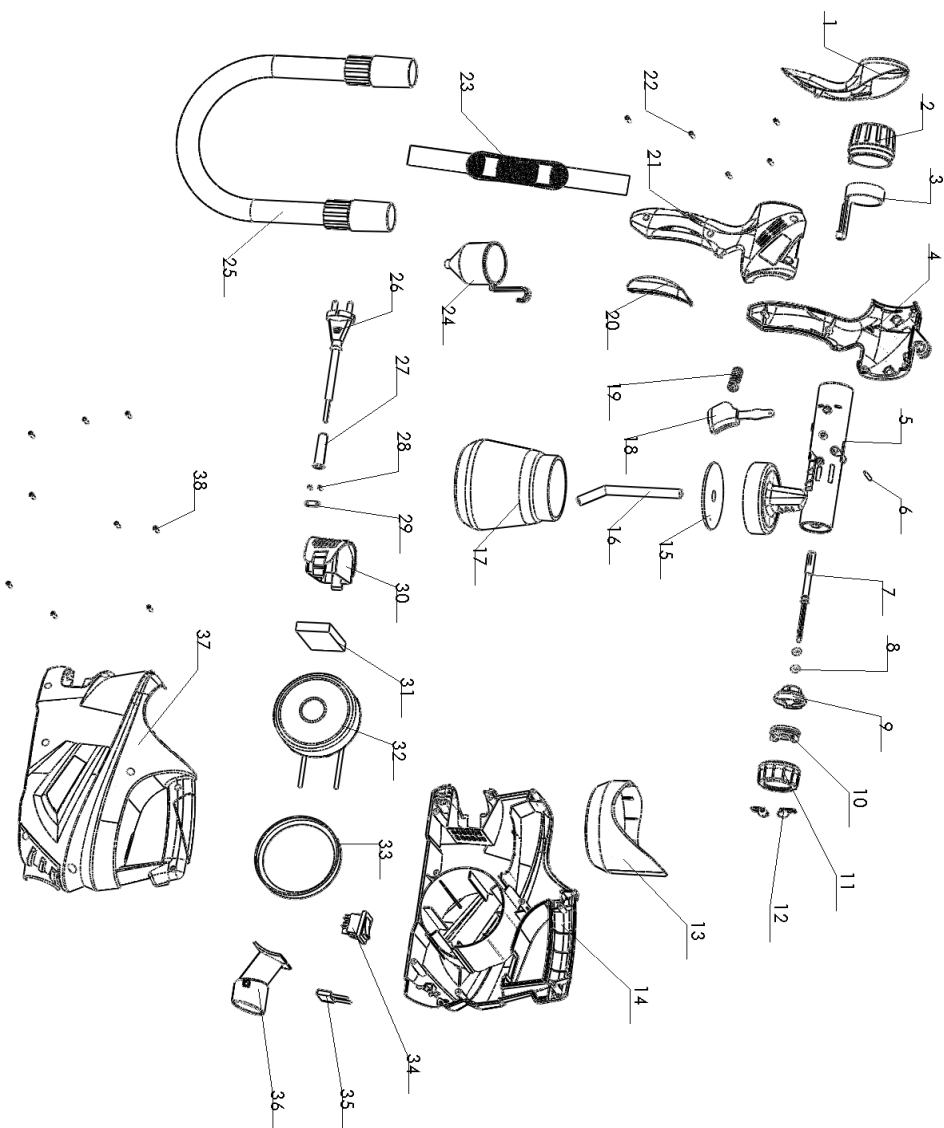

Spare parts list

No	Description
1	Large veneer
2	Air volume control pipe
3	Air volume adjustment limit tube
4	Left handle
5	Spray gun body
6	Pin
7	Flow control needle
8	O-ring
9	Booster plate
10	Fixed plate for flow adjustment knob
11	knob
12	Flow adjustment button
13	Material pot base
14	Left Casing
15	Sealing sponge
16	Pipette
17	Material pot
18	trigger
19	trigger spring
20	Small veneer
21	Right handle
22	bolt
23	Strap
24	funnel
25	Connecting hoses
26	Power cord
27	sheath
28	bolt
29	Crimping plate
30	Air inlet hood
31	Dust blocking sponge
32	Motor
33	Sealing rubber ring
34	switch
35	capacitance
36	Hose connection pipe
37	Right Casing
38	Screw