


## EXPLODED VIEW and SPARE PARTS LIST

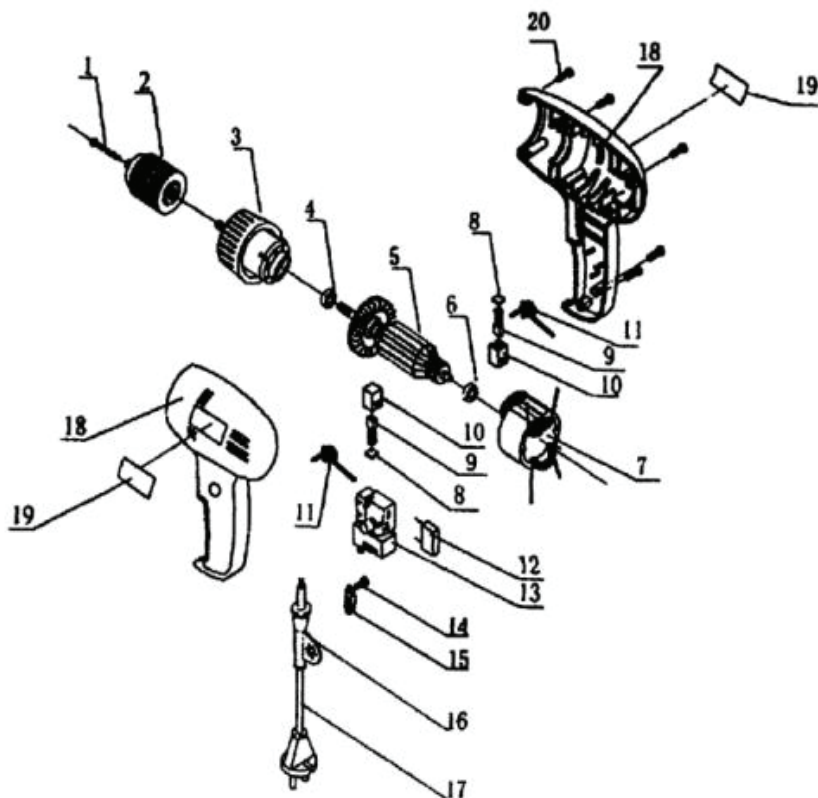

Item No.	Part Name	Qty	Item No.	Part Name	Qty	Item No.	Part Name	Qty
1	Screw M4x16 (left)	1	9	Carbon brush	2	17	Cord	1
2	Chuck	1	10	Brush holder	2	18	Housing	2
3	Gear Box	1	11	Inductor	2	19	Name Plate	1
4	beaing 608	1	12	Condenscr	1	20	Screw ST3x16	8
5	Armature	1	13	Switch	1			
6	bearing 626	1	14	Screw ST4x14	2			
7	Stator	1	15	Cord clip	1			
8	Carbon cap	2	16	Rubber sleeve	1			