


**RDP-CDD06 Exploded view**

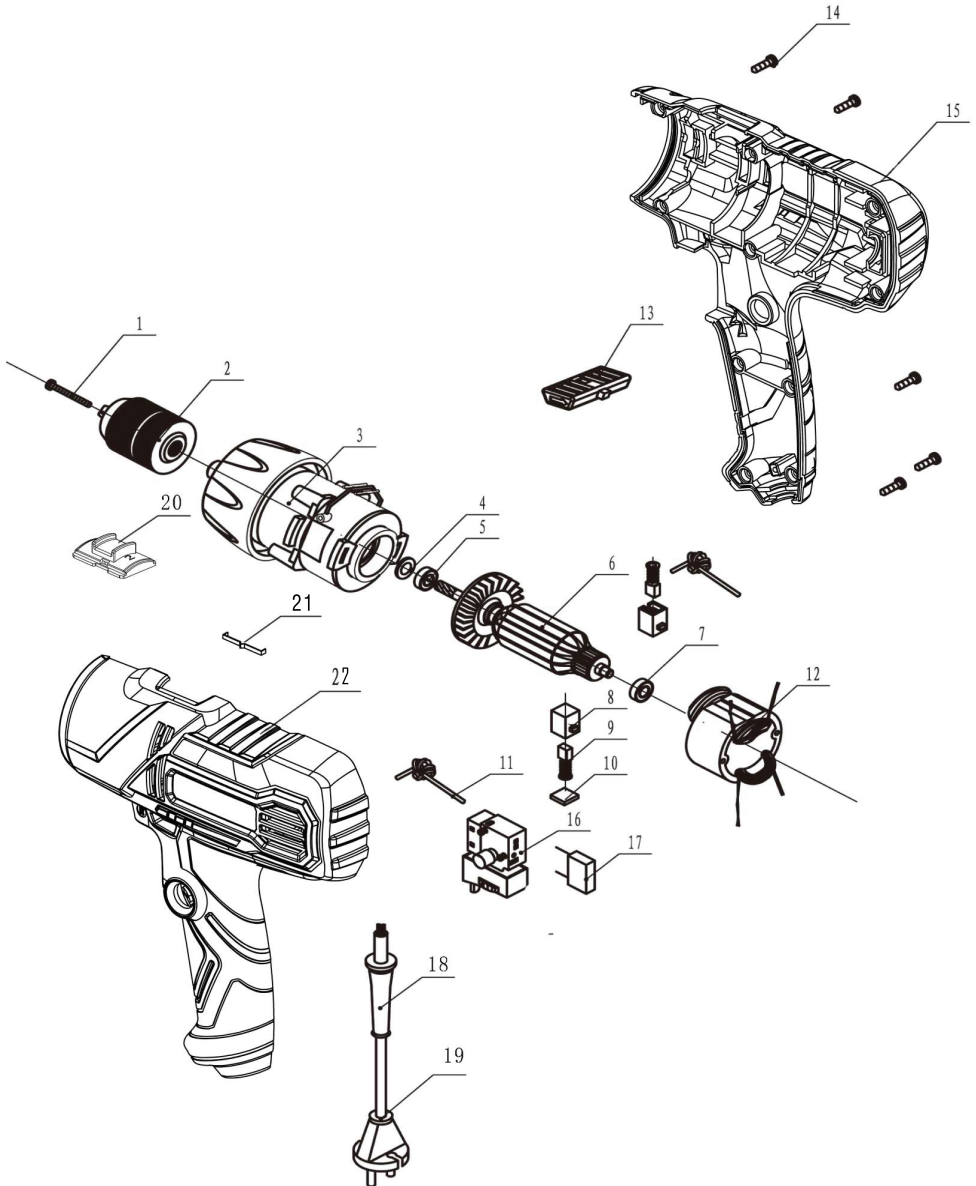

## RDP-CDD06 Spare Parts List

22	left housing	1
21	retaining spring	1
20	Shift push block	1
19	cable and plug	1
18	Cable sheath	1
17	Capacitance	1
16	switch	1
15	right housing	1
14	self-tapping screw ST3*14	10
13	Reversible switch	2
12	stator	1
11	inductance	2
10	Carbon brush cover	2
9	carbon brush	2
8	carbon brush holder	2
7	bearing 626	1
6	rotor	1
5	bearing 608	1
4	Oil seal gasket	1
3	gear box	1
2	Drill chuck 10mm	1
1	Allen screw M5*18	1