

RDP-BPW20 SPARE PARTS LIST

NO.	Description	NO.	Description
1	Spring bracket	19	Dust seals
2	Screws M4x25	20	Function buttons
3	Screws ST4x13	21	Transparent cover
4	Protective cover	22	Digital cover
5	Tower spring	23	Screws ST3x16
6	Porcelain columns	24	Digital labels
7	Heating head	25	Parameter sticker
8	Thermal insulation gaskets	26	Nameplate sticker
9	Non-slip nuts	27	6mm Allen wrench
10	Elastomeric gaskets	28	M8 socket screws
11	Flat pads	29	φ20 male die head
12	Hexagon nuts	30	φ20 female die head
13	Heat-insulated seat	31	φ25 male die head
14	Left and right foot plates	32	φ25 female die head
15	Standing bracket	33	φ32 male die head
16	Left and right casings	34	φ32 female die head
17	Screws ST2.5x6	35	Fiber tubes φ3.5x35
18	Digital display assembly	36	Fiber tubes φ9x35

