


## EXPLODED VIEW RD-EBC06

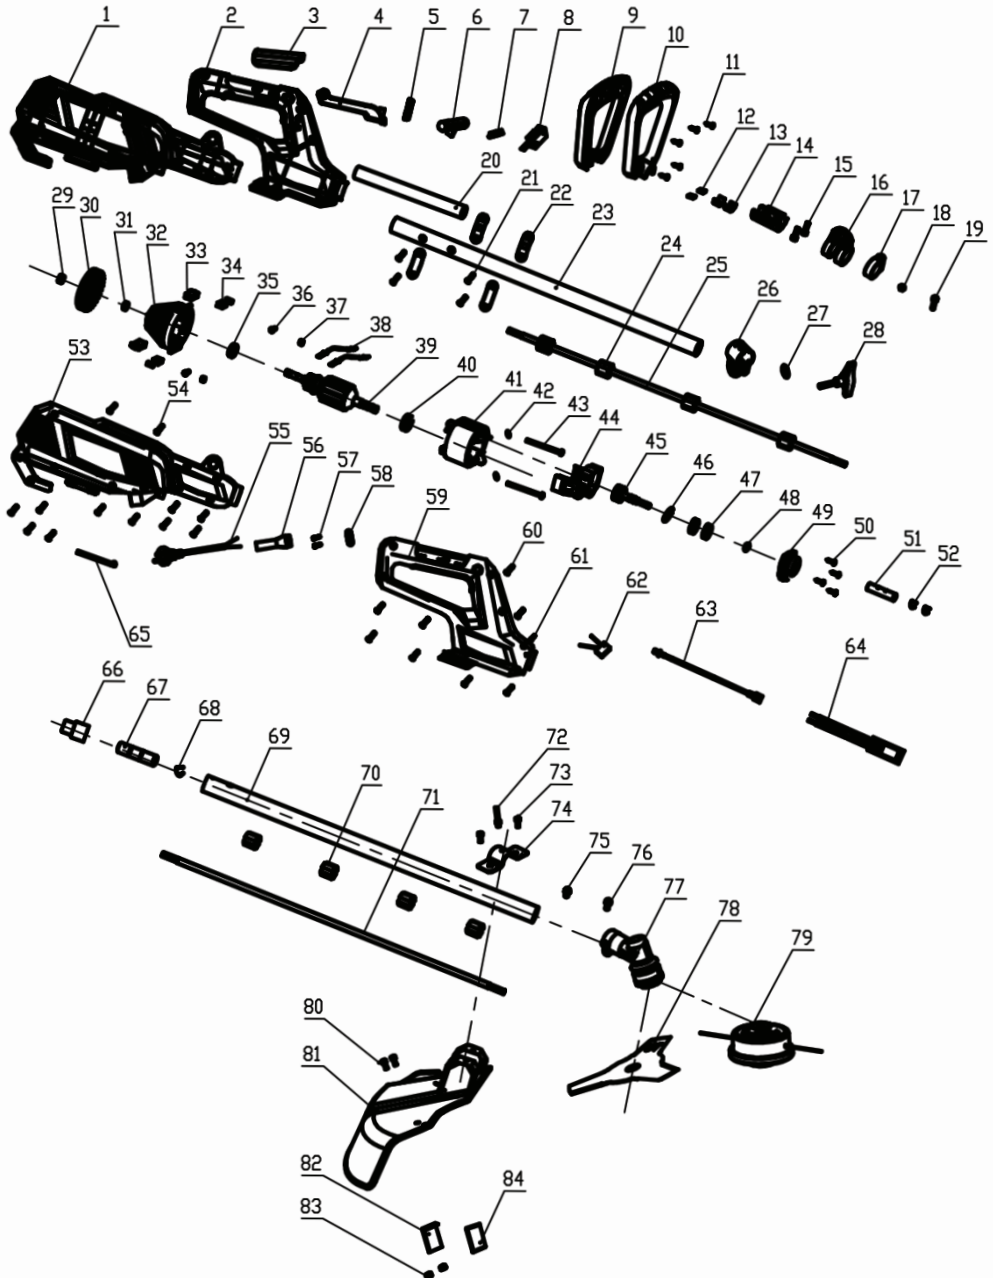

## PARTS LIST RD-EBC06

Position	Name	Qty
1	right housing	1
2	left handle	1
3	insert cover	1
4	trigger	1
5	button spring	1
6	anti self lock button	1
7	anti self lock button spring	1
8	on/off switch	1
9	right auxiliary handle	1
10	left auxiliary handle	1
11	screw	5
12	nut	2
13	rubber washer	2
14	auxiliary handle pressing plate	1
15	screw	2
16	hanger	1
17	hanger ring	1
18	nut	1
19	screw	1
20	sponge	1
21	screw	4
22	pipe pressing plate	4
23	back pipe	1
24	oil bearing	4
25	hard axle	1
26	steel connector	1
27	flat washer	1
28	knob	1
29	nut	1
30	fan	1
31	sleeve $\varnothing 8.2 \times \varnothing 13 \times 4.5$	1
32	back motor support	1
33	carbon brush support	2
34	carbon brush	2
35	bearing 608	1
36	screw	2
37	nut	2
38	wires 1	2
39	rotor	1
40	bearing	1
41	stator	1
42	screw	2

43	flat washer	2
44	front motor support	1
45	output shaft	1
46	retainer ring for hole	1
47	bearing	2
48	retainer ring for shaft	1
49	gear box cover	1
50	screw	4
51	connecting sleeve	1
52	circlip	2
53	right housing	1
54	screw	8
55	cable	1
56	cable sleeve	1
57	screw	2
58	cable pressing plate	1
59	right handle	1
60	screw	8
61	screw	1
62	capacitance	1
63	connecting wire 2	1
64	spanner	1
65	pipe cover	1
66	connecting sleeve	1
67	circlip	1
68	front pipe	1
69	oil bearing	4
70	hard axle	1
71	screw	3
72	rivet	1
73	screws	1
74	fixing plate	1
75	screws	1
76	screws	1
77	gear box assy	1
78	3T blade	1
79	spool	1
80	screw	4
81	grass board	1
82	small blade	2
83	nut	2
84	small blade cover	1