



## PARTS LIST RD-EBC09

<b>№</b>	<b>Description</b>	<b>№</b>	<b>Description</b>
1	Bolt	28	screws
2	D handle	29	carbon brush
3	knob	30	motor back support
4	lock ring	31	ball bearing 608
5	oil bearing	32	rotor
6	hard shaft	33	connecting line 1
7	steel connector	34	nut
8	knob	35	ball bearing 6000
9	screws	36	stator
10	screws	37	motor front support
11	rear pipe	38	screws
12	catch ring	39	output shaft
13	hanger	40	retaining ring
14	screws	41	bearing 609
15	connecting line 2	42	shaft retaining ring
16	switch	43	gear box cover
17	knob spring	44	screw 4*14
18	trigger	45	connecting sleeve
19	right housing	46	circlip
20	capacitance	47	anti self knob
21	screws	48	anti self knob spring
22	screws	49	cable
23	decoration cover	50	cable sleeve
24	screws	51	terminal
25	nut	52	Cable pressing plate
26	fan	53	screw 4*14
27	brush holder	54	left decoration cover
		55	left housing
		56	soft start
		57	overload protector