


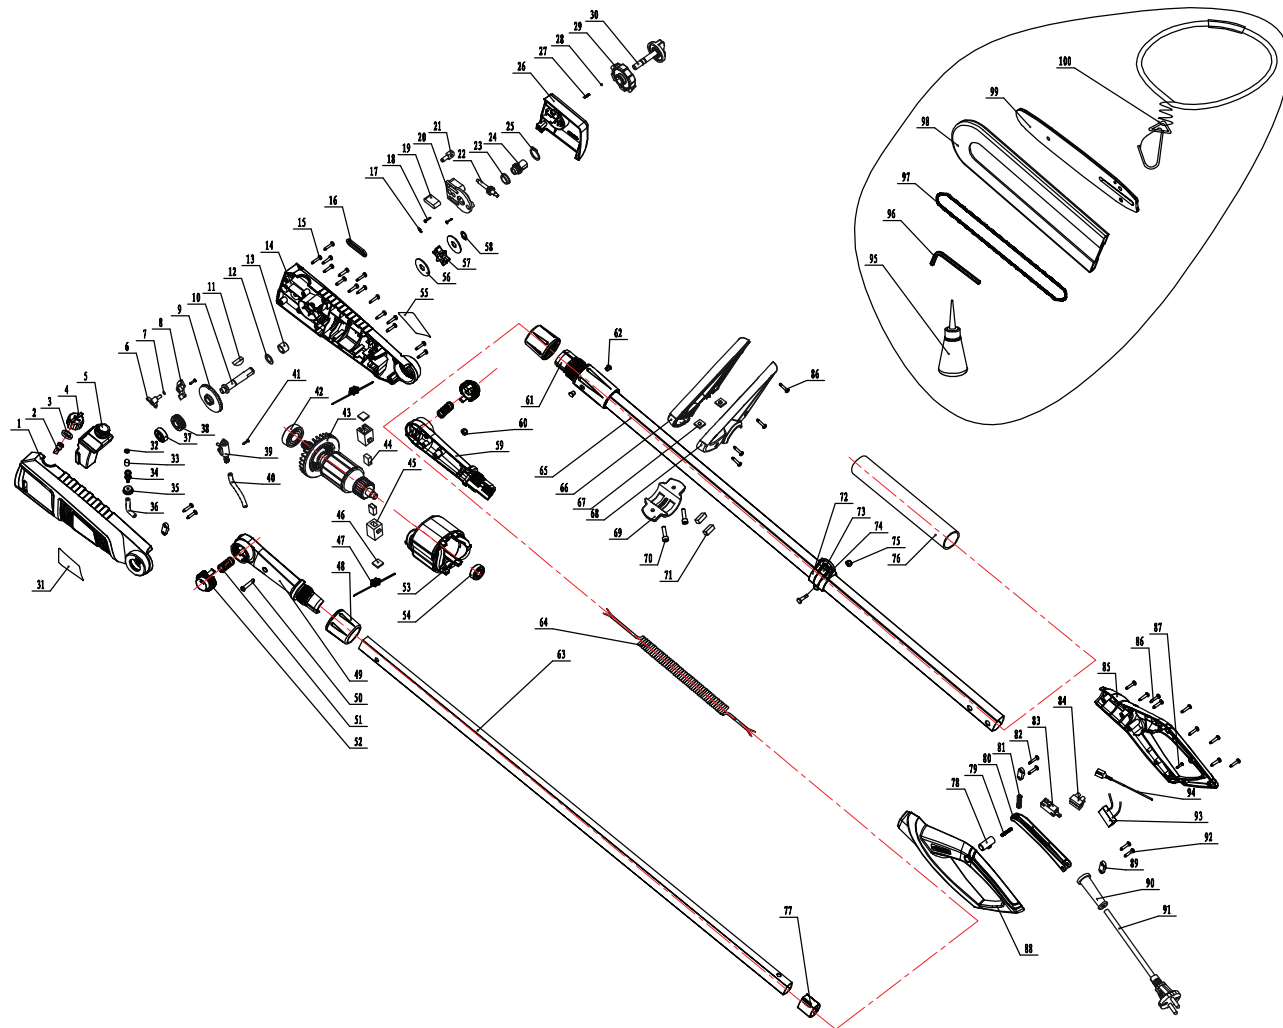

PARTS LIST RD-PS01

No	Name	Qty	No	Name	Qty	No	Name	Qty
1	left cabinet	1	45	carbon brush holder	2	89	tension disc	3
2	breathing mouth	1	46	carbon brush cap	2	90	sheath	1
3	gasket-1	1	47	capacitor	2	91	plug	1
4	oil tank cap	1	48	Thread lock set	2	92	bolt ST4.2*12	6
5	oil tank	1	49	left swivel head	1	93	capacitor	1
6	oil off mouth	1	50	screw	1	94	"internal wiring	1
7	oil off gasket	2	51	Swivel head button spring	2	95	oil tank	1
8	oil off plate	1	52	Swivel head button	2	96	Hex Wrenches	1
9	big gear	1	53	stator	1	97	chain	1
10	output shaft	1	54	bearing	1	98	bar cover	1
11	woodruff key	1	55	lable	1	99	bar	1
12	gasket	1	56	sprocket gasket	2	100	"shoulder girdle	1
13	bearing	1	57	sprocket	1			
14	right cabinet	1	58	ring shield	1			
15	bolt ST4.2*18	15	59	right swivel head	1			
16	gasket-2	1	60	screw	1			
17	steel spring	1	61	"screwed joint	1			
18	bolt ST2.9*9.5	2	62	latch	2			
19	gasket-3	1	63	fiber pipe 1	1			
20	adjust plate	1	64	spring wire	1			
21	adjust guide pin	1	65	fiber pipe 2	1			
22	adjust pole	1	66	front handle-1	1			
23	bar pressing sleeve	1	67	screw cap	2			
24	adjust gear	1	68	front handle-2	1			
25	ring shield	1	69	handle cap	1			
26	cover	1	70	screw	2			
27	spring-1	1	71	rubber gasket 1	2			
28	steel ball	1	72	belt ring	1			
29	adjust button	1	73	belt fix ring	1			
30	Compression knob	1	74	bolt M5x18	1			
31	lable	1	75	screw M5	1			
32	Oil filter cover	1	76	sponge cover	1			
33	sponge	1	77	small pipe	1			
34	filter nozzle	1	78	self-lock knob	1			
35	rubber gasket	1	79	self-lock spring	1			
36	oil inlet	1	80	switch trigger	1			
37	bearing	1	81	switch spring	1			
38	worm	1	82	bolt ST4.2*16	2			
39	oil pump	1	83	switch	1			
40	oil off tube	1	84	fastener	1			
41	screw	2	85	right handle	1			
42	bearing	1	86	bolt ST4.2*18	9			
43	rotor	1	87	bolt ST2.9*9.5	1			
44	carbon brush	2	88	left handle	1			