


Explode Drawing of RDP-SEBV20

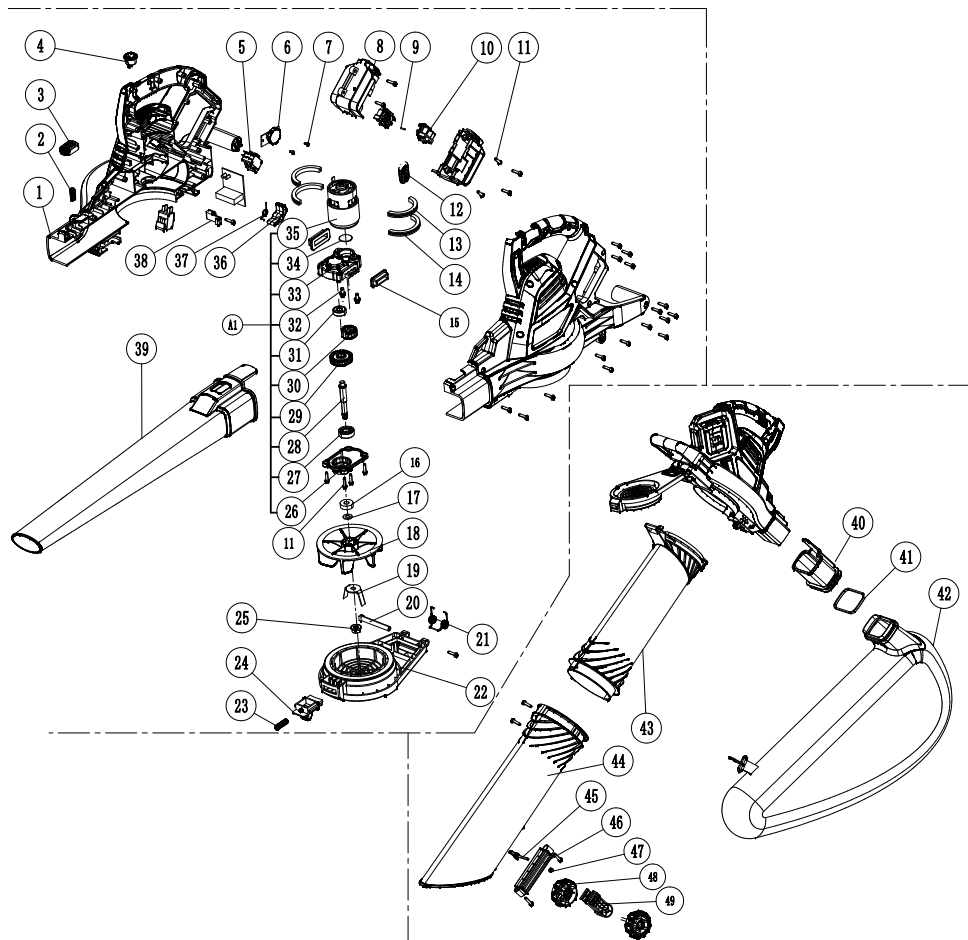

SPARE PARTS of RDP-SEBV20



42	5020045100	dust bag
41	5990010006	anti-theft clasp
40	2029990086	Dust bag interface
39	2020200059	blowpipe
38	2029990202	Press the hook
37	3050090163	Connecting rod torsion spr
36	2029990085	Switch connecting rod
35	3030060008	Huozhong 887 Motor (36V round sb
34	3990010812	O ring
33	2020060001	Gearbox bottom cover
32	3050080618	Cross grooved disc head three combination s
31	3050210018	high speed bearing
30	3990011109	pinion
29	3029990081	large gear
28	3050060205	output shaft
27	3050210109	high speed bearing
26	2020060002	Gearbox cover
25	3050080564	Hex flange face locking
24	2020087901	Push the button
23	3050090600	switch spring
22	2020087900	Base
21	3050090162	torsional spring
20	2029990084	Plastic pin
19	3050010106	Broken blade
18	2020070602	fan blade
17	3050040195	mpeller gasket
16	3990011109	felted wool
15	3990010973	Damping set
14	3990015105	shock pad-1
13	3990015106	shock pad-2
12	3990030108	Square inductance
11	3050080499	Hexagon flower disc head self-tapping s
10	2020180076	bracket
9	2039992576	Ulelectric wire, 16AWG (R227587) (3
8	2020086600	Socket base cove
7	3050080493	Cross grooved disc head tapping s
6	3060097360	Controller
5	3060070025	two wire switch
4	3060070024	bote-shaped switch
3	2020083603	cage knob
2	3050090134	Lock the new spring
1	2040297400	Chassis bottom cover