

PARTS LIST RD-WCH04

Article number	Name	Qty	Article number	Name	Qty
1	Internal hexagonal sc	1	39	Big gear	1
2	Scale base plate	1	40	Self tapping flat spr	4
3	Internal hexagonal sc	5	41	Inner pressure plate	1
4	External hexagonal sc	1	42	Windshield ring	1
5	knob	1	43	Self tapping screw	2
6	Left shield	1	44	stator	1
7	Handle	1	45	Motor barrel	1
8	M8 nut	1	46	Carbon brush holder	2
9	Internal hexagonal sc	1	47	Carbon brush	2
10	Right shield	1	48	Nest spring	2
11	Shield connecting rin	1	49	Soft start circuit bo	1
12	principal axis	1	50	Self tapping screw	6
13	bearing	2	51	Ash spout	1
14	elastic retaining rin	1	52	Vacuum pipe fastening	1
15	Needle roller bearing	1	53	Dust cover of vacuum	1
16	Gearbox	1	54	Vacuum connection pip	1
17	Pinzi	1	55	Saw blade adjustment	4
18	spring	1	56	Saw blade fixing gask	1
19	Stop button	1	57	Saw blade	2
20	Anti loosening nut	1	58	External pressure pla	1
21	Pinion	1	59	Elastic retaining rin	1
22	Bearing	1	60	Roller	1
23	Wind blade	1	61	Shim	1
24	rotor	1	62	Roller shaft	1
25	Bearing	1	63	Shovel blade	1
26	bearing sleeve	1	64	wrench	1
27	Self tapping screw	9	65	External hexagonal sc	1
28	Left casing+soft rubb	1			
29	capacitance	1			
30	Power cord	1			
31	Cable sleeve	1			
32	switch	1			
33	Switch spring	1			
34	Switch lock button	1			
35	On/Off button	1			
36	Right casing+soft rub	1			
37	Cross pan head flat s	4			
38	Gearbox cover	1			