

Spare Parts List HL 1620 S

Shape depends on regional version

HL 1620 S, Type 3511	Pos.	Part No.
Spare Part Housing Set HL 1620 S US	1	110041603
Spare Part Power Cord HL 1620 - HL 1920 S US	2	110024050
Spare Part Electronic Unit HL 1620 S US	3	110041605
Spare Part Motor Unit HL 1620 S US	4	110041606
Spare Part Heating Element HL 1620 S US	5	110041607

Wiring Diagram HL 1620 S

