


## Exploded drawing of Air Compressor RDP-AC15

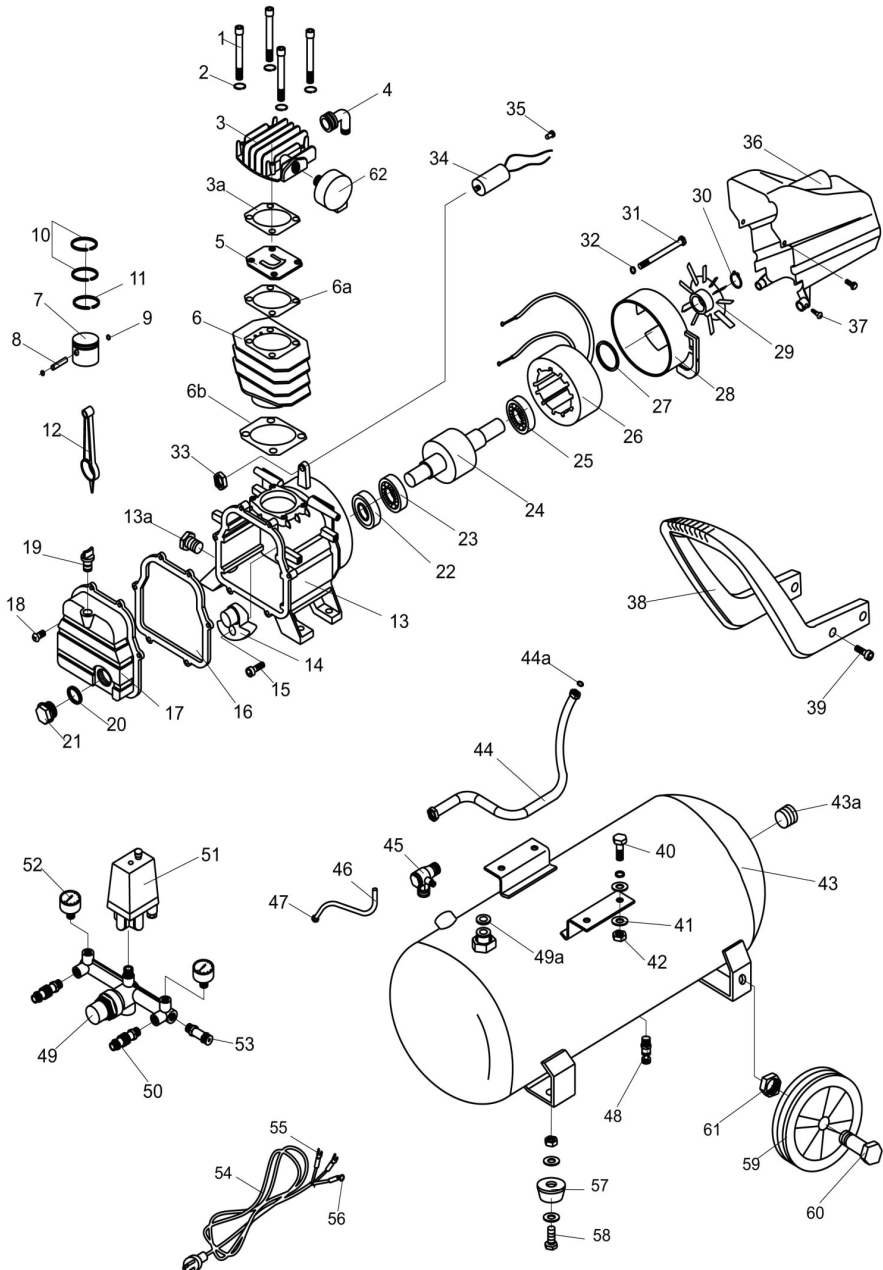

### Parts List of Air Compressor RDP-AC15

| №   | Name               | pcs |
|-----|--------------------|-----|
| 1   | bolt               | 4   |
| 2   | spring pad         | 4   |
| 3   | cylinder cover     | 1   |
| 3a  | cylinder cover pad | 1   |
| 4   | bend               | 1   |
| 5   | valve plate        | 1   |
| 6   | cylinder           | 1   |
| 6a  | valve plate pad    | 1   |
| 6b  | cylinder pad       | 1   |
| 7   | piston             | 1   |
| 8   | piston ping        | 1   |
| 9   | jump ring(inner)   | 2   |
| 10  | Gas ring           | 2   |
| 11  | Oil ring           | 1   |
| 12  | connecting link    | 1   |
| 13  | crankcase          | 1   |
| 13a | screw              | 1   |
| 14  | crank              | 1   |
| 15  | screw              | 1   |
| 16  | oil defector       | 1   |
| 17  | crankcase cover    | 1   |
| 18  | bolt               | 6   |
| 19  | Breath mouth       | 1   |
| 20  | Oil seal ring      | 1   |
| 21  | oil immersion lens | 1   |
| 22  | oil seal           | 1   |
| 23  | bearing            | 1   |
| 24  | Rotor              | 1   |
| 25  | bearing            | 1   |
| 26  | Stator             | 1   |
| 27  | Shaft gear         | 1   |
| 28  | holder             | 1   |
| 29  | fan                | 1   |
| 30  | Axle spring        | 1   |
| 31  | bolt               | 4   |

| №  | Name               | pcs |
|----|--------------------|-----|
| 32 | Spring washer      | 4   |
| 33 | Nut                | 1   |
| 34 | capacitor          | 1   |
| 35 | Line cap           | 2   |
| 36 | wind scooper       | 1   |
| 37 | screw              | 2   |
| 38 | Plastic handle     | 1   |
| 39 | screw              | 2   |
| 40 | screw              | 4   |
| 41 | Spring washer      | 4   |
| 42 | Nut                | 4   |
| 43 | tank               | 1   |
| 44 | high-pressure tube | 1   |
| 45 | single valve       | 1   |
| 46 | un-load valve      | 1   |
| 47 | un-load valve bolt | 1   |
| 48 | drain plug         | 1   |
| 49 | pressure holder    | 1   |
| 50 | Bleed valve        | 2   |
| 51 | pressure switch    | 1   |
| 52 | Pressure gauge     | 2   |
| 53 | safe valve         | 1   |
| 54 | power cable        | 1   |
| 55 | Insert terminal    | 2   |
| 56 | Insert terminal    | 1   |
| 57 | rubber pad         | 1   |
| 58 | bolt               | 1   |
| 59 | rubber wheel       | 2   |
| 60 | axle               | 2   |
| 61 | nut                | 4   |
| 62 | muffler            | 1   |
| 63 |                    |     |
| 64 |                    |     |
| 65 |                    |     |
| 66 |                    |     |