


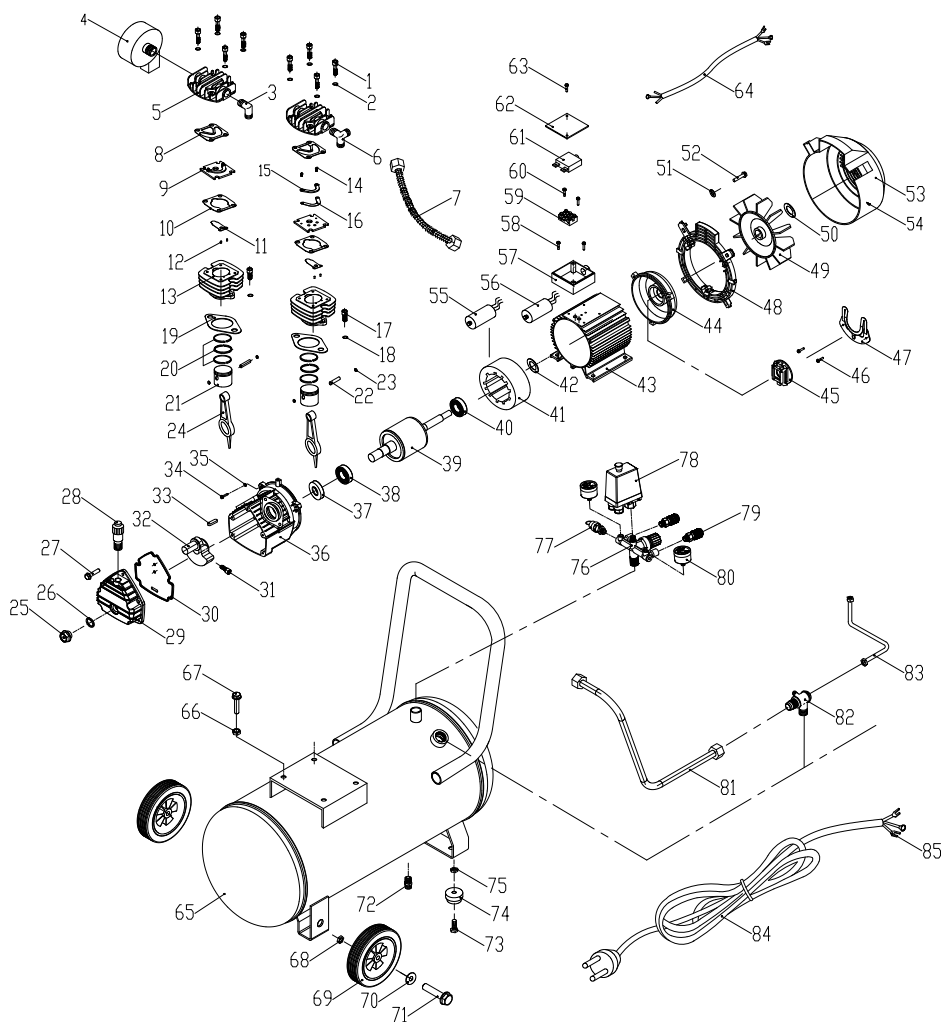

Parts List

1	Bolt	8	44	Rear cover	1
2	Spring washer	8	45	Centrifugal Switch	1
3	Exhaust elbow	1	46	Bolt	2
4	Exhaust elbow	1	47	Centrifugal board	1
5	Air filter	2	48	Fan cover bracket	1
6	Cylinder head	2	49	Fan	1
7	Cylinder head gasket	2	50	Locking-ring	1
8	Valve plate	2	51	Spring washer	3
9	Valve plate gasket	2	52	Bolt	3
10	Intake valve sheet	2	53	Fan cover	1
11	Position pin	4	54	Bolt	2
12	Cylinder	2	55	Starting capacitor	1
13	Bolt	1	56	Working capacitor	1
14	Exhaust five-way	1	57	Terminal box base	1
15	Release valve	1	58	Bolt	4
16	Exhaust pipe	2	59	Terminal board	1
17	Bolt	4	60	Bolt	2
18	Spring washer	4	61	Protector	1
19	Cylinder gasket	2	62	Terminal box cover	1
20	Piston ring	2	63	Bolt	4
21	Piston	2	64	Lead wire	1
22	Piston pin	2	65	Tank	1
22.9	Locking-ring	4	66	Nut	4
24	Connection rod	2	67	Bolt	4
25	Oil leveler	1	68	Nut	2
26	O-ring	1	69	Wheel	2
27	Bolt	5	70	Plain washer	2
28	Breath pipe	1	71	Axle bolt	2
29	Side cover	1	72	Drain valve	1
30	Oil baffle plate	1	73	Bolt	2
31	Bolt	1	74	Foot pad	2
32	Crank	1	75	Nut	2
33	Crank Pin	1	76	Regulator valve	1
34	Bolt	3	77	Safety valve	1
35	Spring washer	3	78	Pressure switch	1
36	Crankcase	1	79	Quik connect	2
37	Oil seal	1	80	Pressure gauge	2
38	Bearing	1	81	Exhaust pipe	1
39	Rotor	1	82	Check valve	1
40	Bearing	1	83	Release pipe	1
40.9	Wound stator	1	84	Power cord	1
42	Wave washer	1	85	Terminal	10
43	Frame	1			