


Exploded drawing of Air Compressor RD-AC040

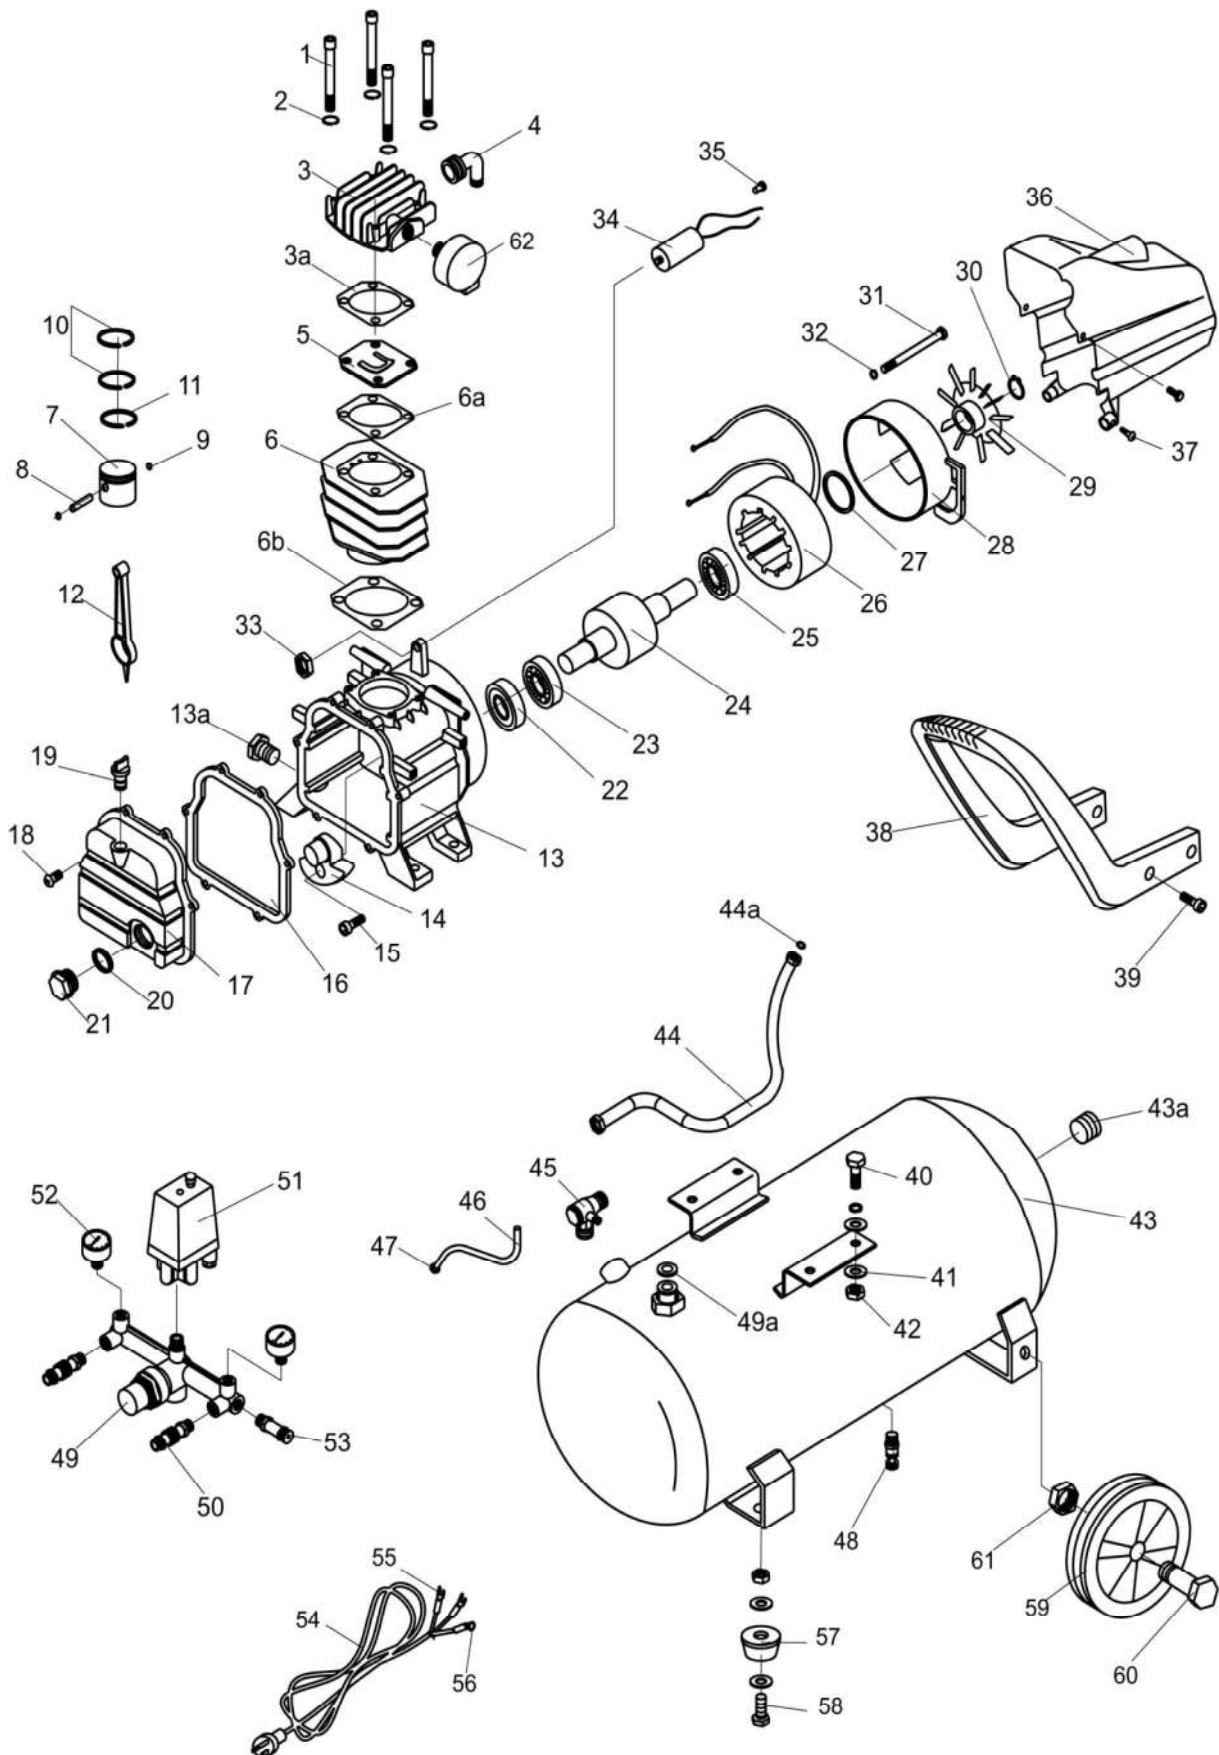

Parts List of Air Compressor RD-AC040

№	Name	pcs
1	bolt	4
2	spring pad	4
3	cylinder cover	1
3a	cylinder cover pad	1
4	bend	1
5	valve plate	1
6	cylinder	1
6a	valve plate pad	1
6b	cylinder pad	1
7	piston	1
8	piston ping	1
9	jump ring(inner)	2
10	Gas ring	2
11	Oil ring	1
12	connecting link	1
13	crankcase	1
13a	screw	1
14	crank	1
15	screw	1
16	oil defector	1
17	crankcase cover	1
18	bolt	6
19	Breath mouth	1
20	Oil seal ring	1
21	oil immersion lens	1
22	oil seal	1
23	bearing	1
24	Rotor	1
25	bearing	1
26	Stator	1
27	Shaft gear	1
28	holder	1
29	fan	1
30	Axle spring	1
31	bolt	4

№	Name	pcs
32	Spring washer	4
33	Nut	1
34	capacitor	1
35	Line cap	2
36	wind scooper	1
37	screw	2
38	Plastic handle	1
39	screw	2
40	screw	4
41	Spring washer	4
42	Nut	4
43	tank	1
44	high-pressure tube	1
45	single valve	1
46	un-load valve	1
47	un-load valve bolt	1
48	drain plug	1
49	pressure holder	1
50	Bleed valve	2
51	pressure switch	1
52	Pressure gauge	2
53	safe valve	1
54	power cable	1
55	Insert terminal	2
56	Insert terminal	1
57	rubber pad	1
58	bolt	1
59	rubber wheel	2
60	axle	2
61	nut	4
62	muffler	1
63		
64		
65		
66		