


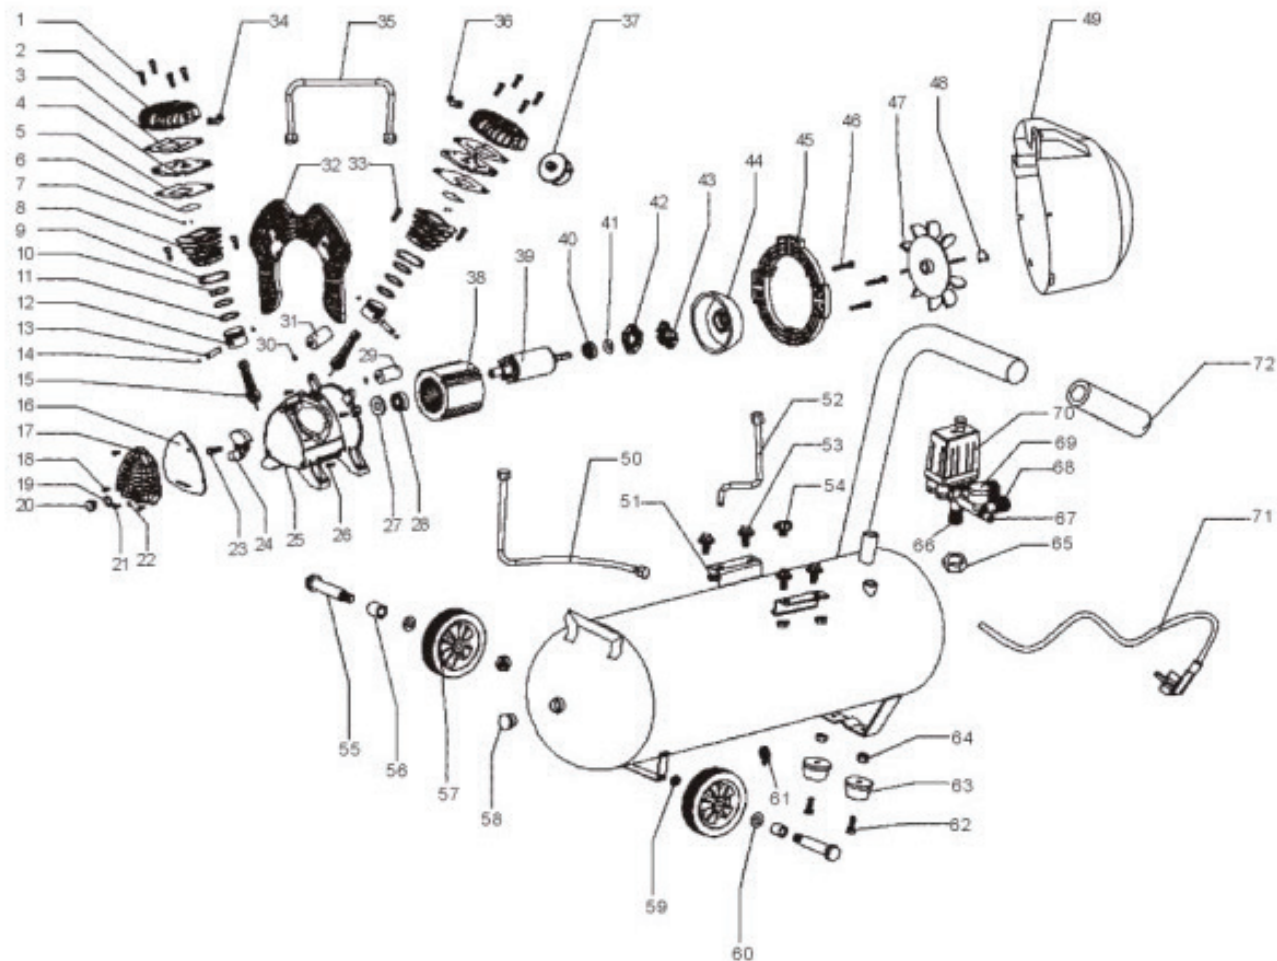

PARTS LIST

NO	Designation	Qty	NO	Designation	Qty
1	Bolt M6x55	4	38	stator	1
2	cylinder head	1	39	rotor	1
3	cylinder head gasket	2	40	bearing 6202	1
4	valve plate	2	41	wave washer D35	1
5	valve plate gasket	2	42	Leave the heart switch scaleboard	1
6	valve clack	2	43	Leave the heart switch	1
7	Sell the son	4	44	The electrical engineering cover	1
8	cylinder	2	45	Lead the breeze cover blocks the plank	1
9	cylinder gasket	2	46	bolt M5x30	6
10	piston ring	4	47	Breeze leaf	1
11	Oil wreath	2	48	Block the turn 14	1
12	piston	2	49	Lead the breeze cover	1
13	piston pin	2	50	The high pressure tube	5
14	circlip	4	51	Nut M8	1
15	connecting rod	2	52	Unload the lotus tube	4
16	rubber gasket	1	53	The outside is hexangular bolt M8x25	1
17	crank case cover	1	54	One-way valve	4
18	bolt M5x16	6	55	Axle	1
19	oil leveler gasket	1	56	Axle set	2
20	oil leveler	1	57	Wheel	2
21	bolt M6x10	1	58	Block up the head	2
22	O circlip $\phi 5.6 \times \phi 1.8$	1	59	Nut M10	2
23	hex bolt M8x22(left)	1	60	Even mat	2
24	crank	1	61	The catchment fill	4
25	crank case	1	62	The outside is hexangular bolt M8x25	1
26	bolt M6x40	8	63	Rubber mat	2
27	sealing ring	1	64	Defend the loose nut M8	2
28	bearing 6204	1	65	Combine the tight nut	2
29	Start the electric capacity	1	66	The support is total to become	1
30	Nut M8	2	67	Safe valve	1
31	Revolve the electric capacity	1	68	Quickly change to deal with contact	1
32	Prop up the plank	1	69	Manometer	2
33	bolt M8x25	4	70	Pressure switch	2
34	Direct shipping links	1	71	Plug line	1
35	Connect the connector	1	72	Rubber hand handle	1
36	Curved head of right angle	1	73		1