



PARTS LIST		
Serial Number	Description	Quantity
1	Float switch	1
2	Power cord	1
3	Tapping screw	2
4	Tapping screw	3
5	cable clip	1
6	Screw	1
7	Pump housing	1
8	Tapping screw	4
9	O ring	2
10	rear pump cover	1
11	The air flow body	1
11-1	Sealing ring	1
12	O ring	1
13	Stell ball	1
14	The air flow nut	1
15	Handle cover	1
16	briquetting	1
17	Handle	1
18	output connector	1
19	O ring	1
20	Screw	1
21	Elbow	1
22	O ring	1
23	Cable sheath	2
24	Cable sheath	2
25	The cable retainer	2
26	15uF capacitance	1
27	Cable briquetting	1
28	Tapping screw	3
29	Rear cover	1
29-1	Wire sheath	
29-2	washer	1
29-3	yellow-green wire	1
29-4	lug plate	1