


RDP-WP44 exploded view

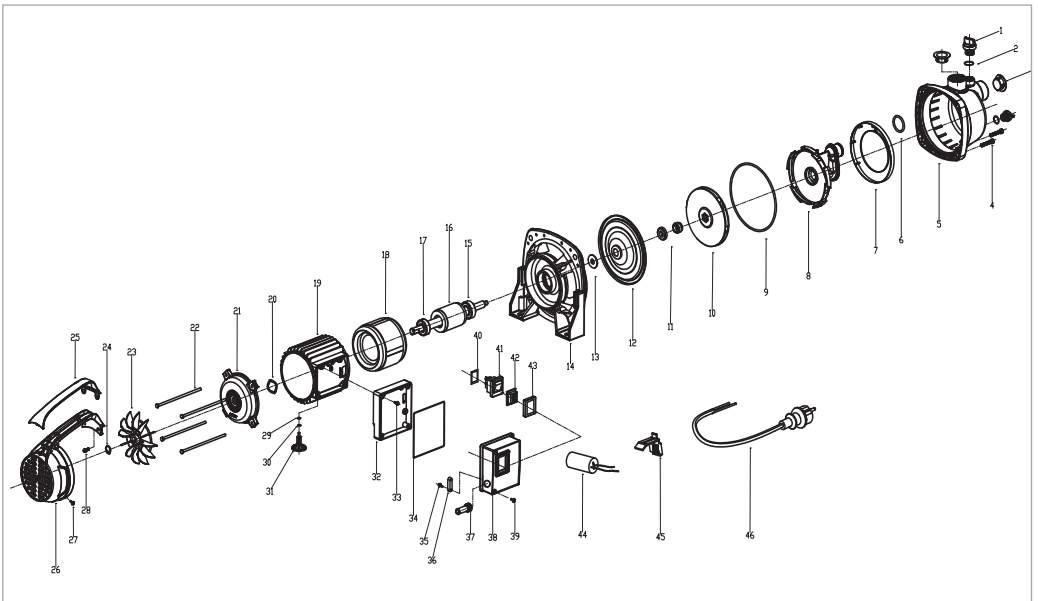

PARTS LIST RDP-WP44

1	valve cover
2	O-ring
3	plastic cover
4	screw
5	pump body
6	O-ring
7	plastic cover
8	difuser
9	O-ring
10	impeller
11	mechanical seal
12	SS-flange
13	swing ring
14	bracket
15	bearing
16	rotor
17	bearing
18	stator
19	main body
20	wave gasket
21	motor back cover
22	body screw
23	fan
24	clamp spring
25	handle cover
26	fan cover
27	screw
28	screw
29	spring washer
30	flat gasket
31	supporting foot
32	switch box-basic
33	screw
34	seal
35	screw

36	cable buckle
37	cable jacket
38	switch box-cover
39	screw
40	seal
41	switch
42	switch-cover
43	switch bracket
44	capacitance
45	capacitance buckle
46	cable