


EXPLODED VIEW SPARE PARTS LIST

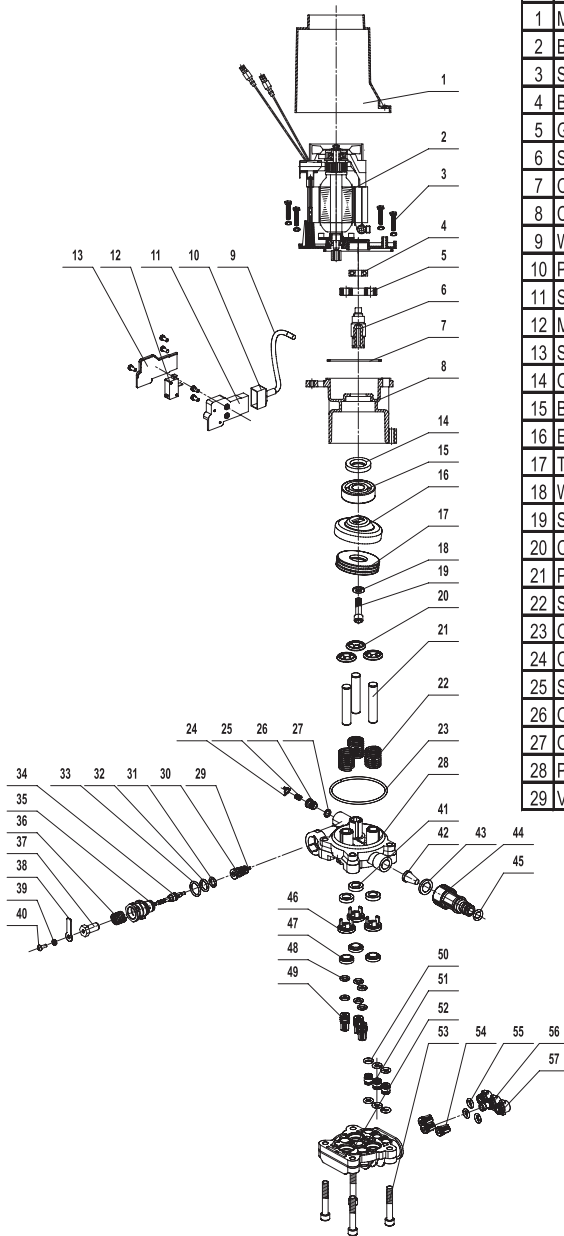

No.	Name	Qty	No.	Name	Qty
1	Motor Cover	1	30	Valve Frame	1
2	Brush Motor	1	31	O-ring	1
3	Screw	4	32	O-ring	1
4	Bearing	1	33	O-ring	1
5	Gear	1	34	Bypass Core	1
6	Shaft	1	35	Bypass Base	1
7	O-ring	1	36	Spring	1
8	Connection Base	1	37	Nut	1
9	Wire	1	38	Switch Adjustor	1
10	Protection Sleeve	1	39	Washer	1
11	Switch Box	1	40	Screw	1
12	Micro-switch	1	41	Oil Seal	3
13	Switch Box Cover	1	42	Inlet Screen	1
14	Oil Seal	1	43	Washer	1
15	Bearing	1	44	Inlet Connector	1
16	Eccentric Bowl	1	45	O-ring	1
17	Thrust Bearing	1	46	Piston Frame	3
18	Washer	1	47	Water Seal	3
19	Screw	1	48	O-ring	6
20	Clip Spring	3	49	Inlet Valve	3
21	Piston	3	50	O-ring	6
22	Spring	3	51	Bridge Pipe	3
23	O-ring	1	52	Pump Cover	1
24	Clip Spring	1	53	Screw	4
25	Spring	1	54	Outlet Valve	3
26	Outlet Stopper	1	55	O-ring	3
27	O-ring	1	56	Long Valve Cover	1
28	Pump Body	1	57	Short Valve Cover	2
29	Valve Sheet	1	58		