


## BREAKDOWN T-105

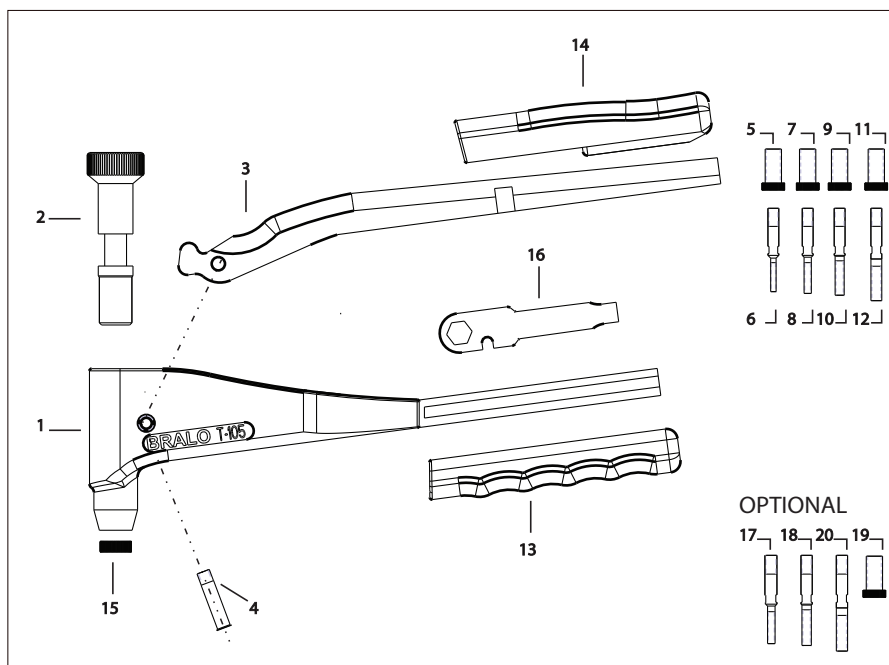

| N° | REFERENCE   | DESCRIPTION         |
|----|-------------|---------------------|
| 1  | 05TR0105001 | Maincorp            |
| 2  | 05TR0105002 | Mandrel holder      |
| 3  | 05BM0075003 | Steel lever         |
| 4  | 05BM0075004 | Screw pin           |
| 5  | 05TR0105005 | Nosepiece M3        |
| 6  | 05TR0105006 | Mandrel M3          |
| 7  | 05TR0105007 | Nosepiece M4        |
| 8  | 05TR0105008 | Mandrel M4          |
| 9  | 05TR0105009 | Nosepiece M5        |
| 10 | 05TR0105010 | Mandrel M5          |
| 11 | 05TR0105011 | Nosepiece M6        |
| 12 | 05TR0105012 | Mandrel M6          |
| 13 | 05BM0075013 | Main handle         |
| 14 | 05BM0075014 | Steel lever handle  |
| 15 | 05TR0105015 | Adjustment lock-nut |
| 16 | 05BM0075016 | Key                 |

### OPTIONAL

|    |             |                         |
|----|-------------|-------------------------|
| 17 | 05TR0105W08 | Mandrel nº8 (5/32 UNC)  |
| 18 | 05TR0105W10 | Mandrel nº10 (3/16 UNC) |
| 19 | 05TR0105W11 | Nosepiece 1/4 UNC       |
| 20 | 05TR0105W12 | Mandrel 1/4 UNC         |

\* The spare part number 17 is used together with the number 7  
The spare part number 18 is used together with the number 9