


# RDP-EP10S Exploded view

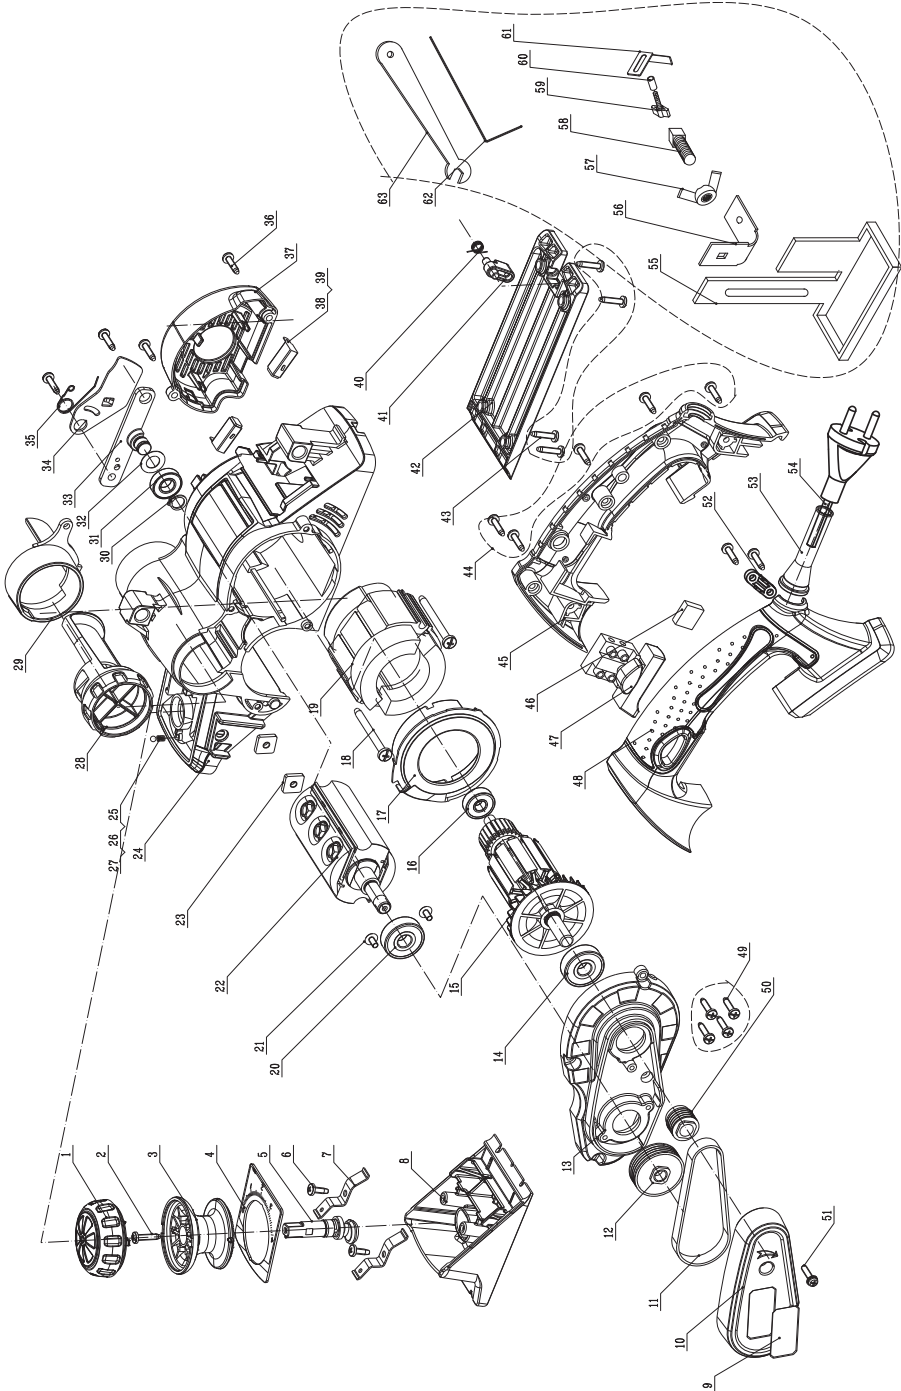

## RDP-EP10S Spare Parts List

No.	Parts Name	Pcs
1	Adjust-Hand Handle Cover	1
2	Screw St4.2x18	1
3	Adjust-Hand Handle	1
4	Caver Degree Pan	1
5	Depth Adjust Pin	1
6	Screw M4x14	2
7	Spring Flake	2
8	Front Bottom Plate	1
9	Name Plates	1
10	Belt Cover	1
11	Belt 4Pj-240	1
12	Big Belt Pulley	1
13	Middle Cover	1
14	Bearing6200rz	1
15	Rotor	1
16	Bearing608rz	1
17	Guide Wind Circle	1
18	Screw St4.8x55	2
19	Stator	1
20	Bearing6200rz	1
21	Screw M4x14	2
22	Knife-Axis	1
23	Nut M6	2
24	Housing	1
25	Small Spring	1
26	Steel Ball 2.5	1
27	Copper Cover	1
28	Canister	1
29	Adapter	1
30	Check Ring	1
31	Bearing6900	1
32	Washer $\Phi$ 10	1
33	Bearing Bracket	1
34	Safe Cover	1
35	Pressure Spring	1

No.	Parts Name	Pcs
36	Screw St4.2x16	2
37	Carbon Brush Cover	1
38	Carbon Brush Holder	2
39	Carbon Brush	2
40	Shelf Spring	1
41	Shelf	1
42	Bottom Plate	1
43	Screw St4.2x16	4
44	Screw St4.2x16	4
45	Right Handle Cover	1
46	Capacitor	1
47	Switch	1
48	Left Handle Cover	1
49	Screw St4.2x16	4
50	Small Pulley	1
51	Screw M4x16	1
52	Spring	1
53	Cable Cover	1
54	Front-Wheel Frame	1
55	Backing	1
56	Tabulator	1
57	Screw M6	1
58	Nut M6	1
59	Adjust-Knob	1
60	Alu-Sleeve	2
61	Depth Ruler	1
62	Hex Spanner	1
63	Wrench	1