


# RD-EP12 Explosive View

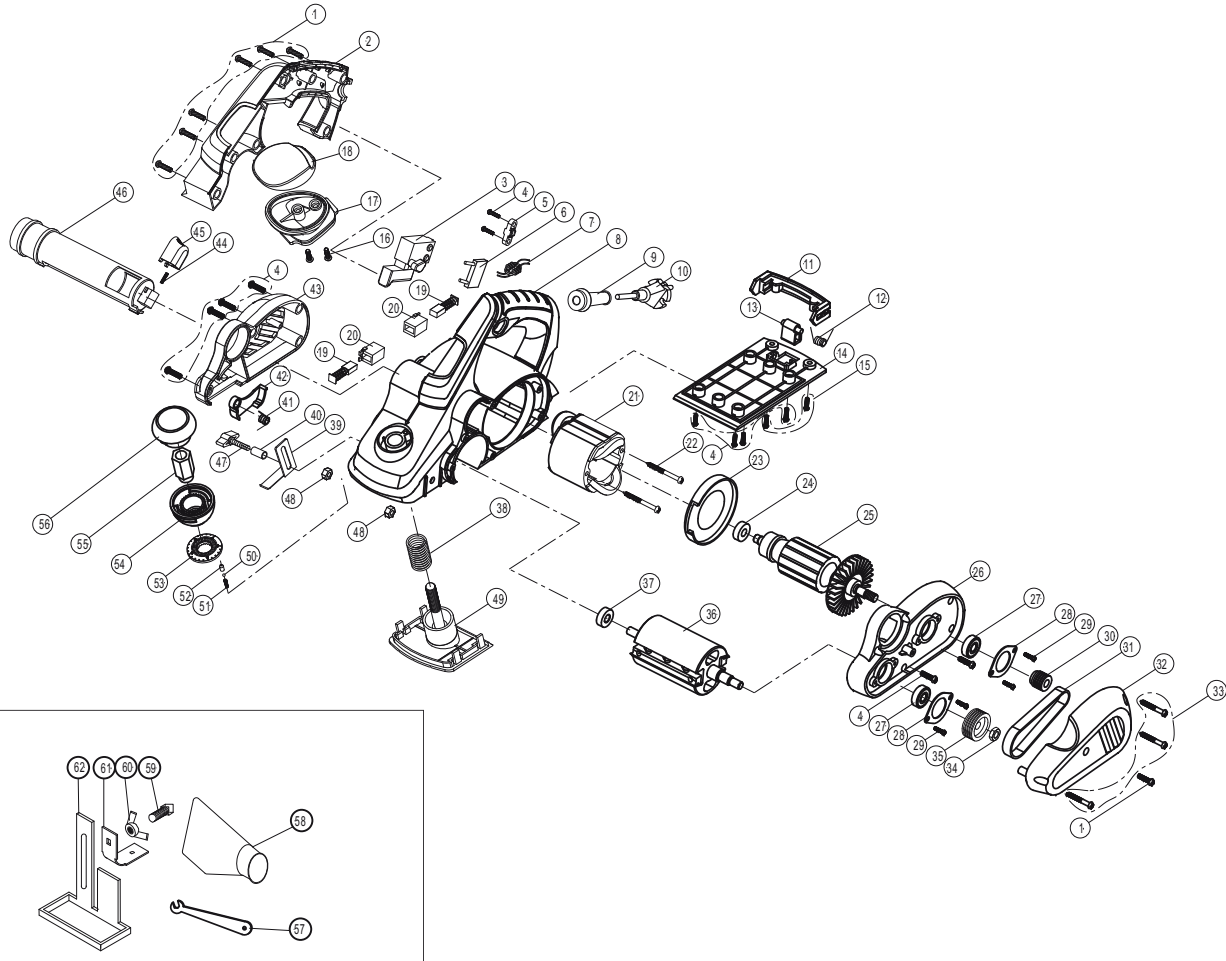

## RD-EP12 Spare Parts List

No.		50	Steel ball 2.5
1	Screw ST4.2×16	51	Small Spring
2	Left Hand Stem	52	Copper Cover
3	switch	53	Caver Degree Pan
4	Screw ST4.2×14	54	adjusting handle
5	Cable Pressure board	55	plastic nut
6	capacitor	56	adjusting handle cover
7	Inductance	57	Spanner
8	Housing	58	Dust bag
9	Cable Cover	59	nut M6
10	Cable	60	butterfly nutM6
11	Housing Cover	61	Assistance backer
12	Shelf Spring	62	Backing
13	Shelf		
14	Bottom plate		
15	Screw M4X12		
16	Screw ST4.2×16		
17	front handle		
18	front handle cover		
19	Carbon brush		
20	Carbon brush holder		
21	Stator		
22	Screw ST4.2X55		
23	Guide wind circle		
24	Bearing 626RZ		
25	Rotor		
26	Middle Cover		
27	Bearing 608RZ		
28	Bearing Cover		
29	Screw ST3.9X12		
30	Small Belt Wheel		
31	Belt		
32	belt cover		
33	Screw ST4.2X28		
34	Nut M8		
35	Big Belt Wheel		
36	Knife-axis		
37	Bearing 626RZ		
38	Big Spring		
39	Depth Ruler		
40	Alu-Sleeve		
41	Canister Spring		
42	Canister		
43	Right cover		
44	Canister Spring		
45	Button		
46	Canister		
47	Adjust nut		
48	Nut M6		
49	Front Bottom plate		