


EXPLODED VIEW

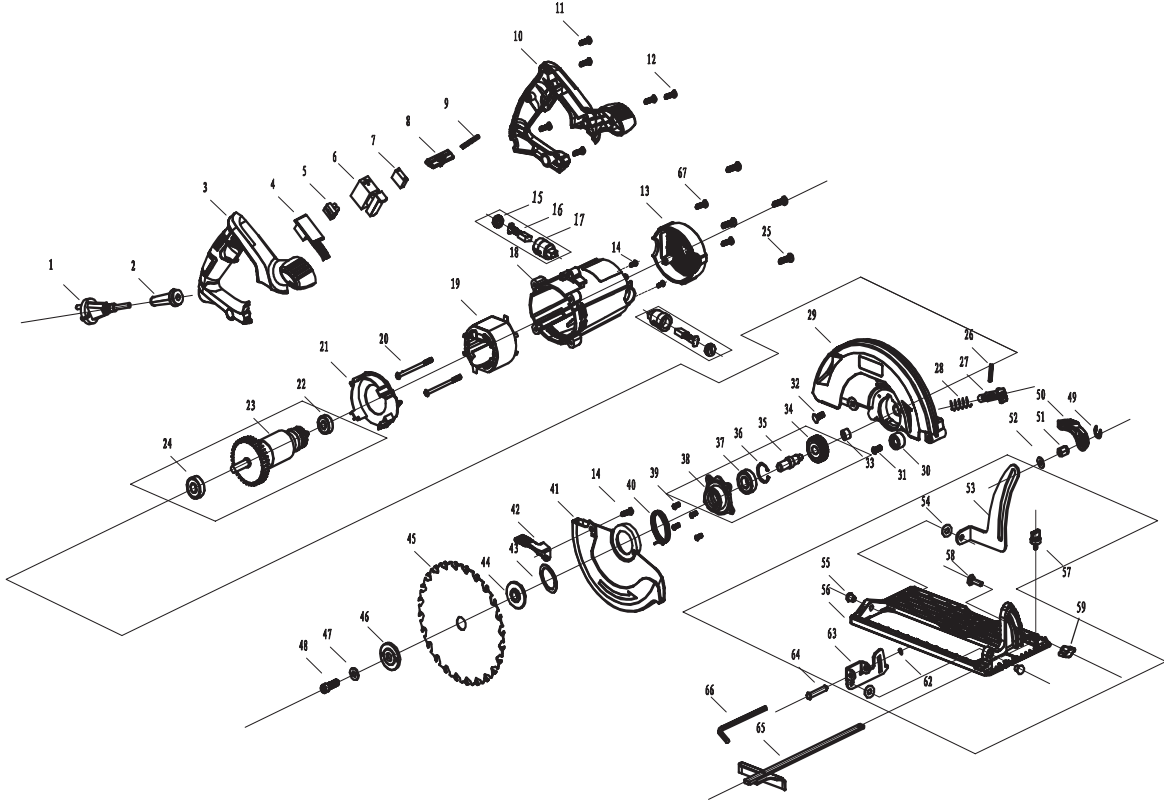

SPARE PARTS LIST

1	Cable sheath		47	Saw blade clamping washer
2	Cable		48	Inner six angle screws M8x14
3	Right handle		49	Snap spring $\phi 9$
4	Soft start board		50	Depth clamping wrench
5	Binding post		51	Depth clamping nut
6	Switch		52	Gasket
7	0.22 μ F Capacitance		53	The depth of the stent
8	Left and right buttons of switch		54	Bottom gasket
9	Button in the spring		55	Connect rivet
10	Left handle		56	Baseplate assembly (190 saw blade)
11	Screws ST4x16		57	Guide ruler clamping knob - A
12	Screws ST4x25		58	Screws M6x22
13	Back cover		59	Angle clamping knob
14	Screws ST4x12		62	Circlip for shaft $\phi 7$
15	Brush cover		63	Angle brackets
16	Carbon brush		64	Connecting pin
17	Brush holder		65	Parallel guide
18	Housing		66	Spanner S=6
19	Stator		67	Screws ST4x20
20	Screws ST4x65			
21	Wind ring			
22	Bearing 608			
23	Rotor			
24	Bearing 6000			
25	Screws M5x20			
26	Spring column pin 4x24			
27	Shaft lock			
28	Shaft lock spring			
29	Aluminum head shell			
30	Stopping pad			
31	Screws M6x14			
32	Depth clamping screw			
33	Sleeve bearing 8x12			