

Illustration - Type - E

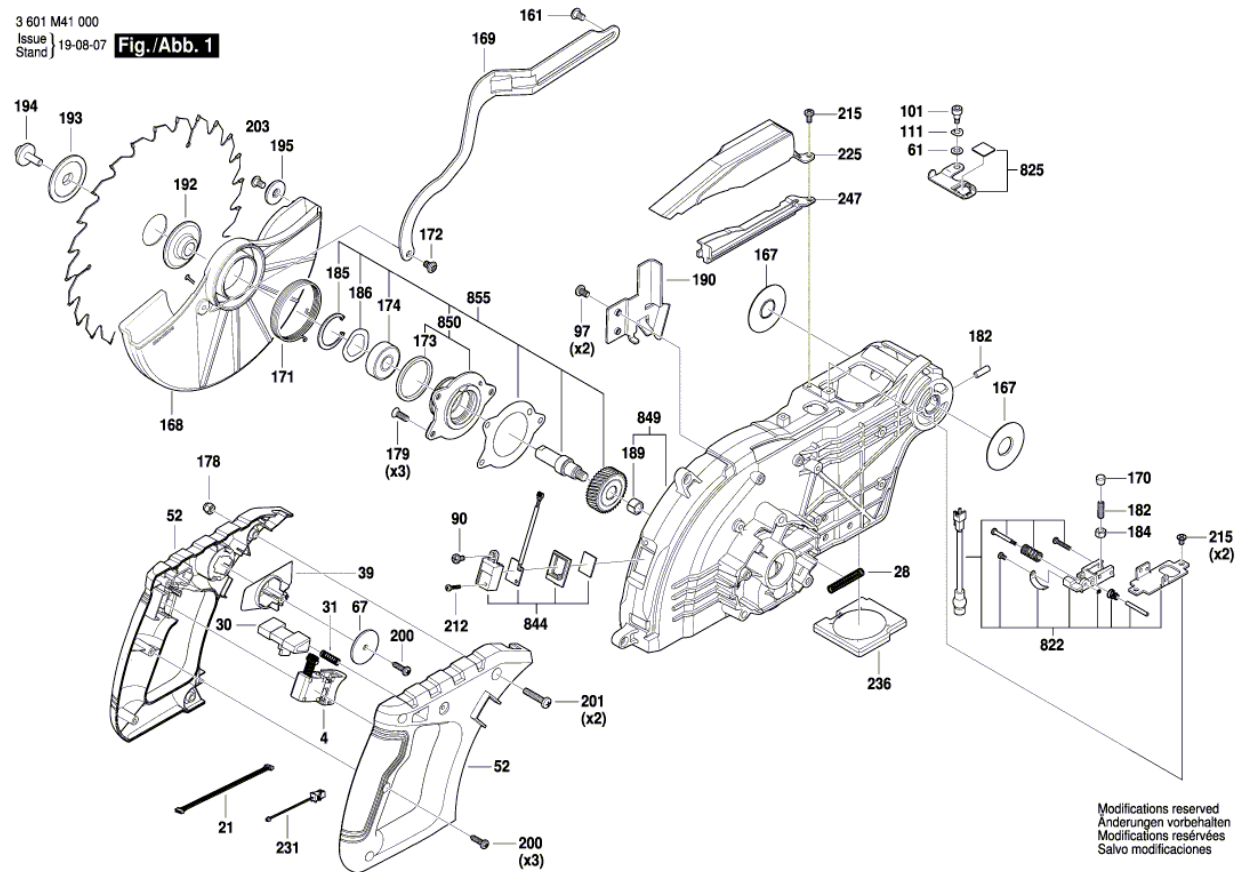


Illustration - Type - E

3 601 M41 000
Issue
Stand 19-11-14 **Fig./Abb. 2**


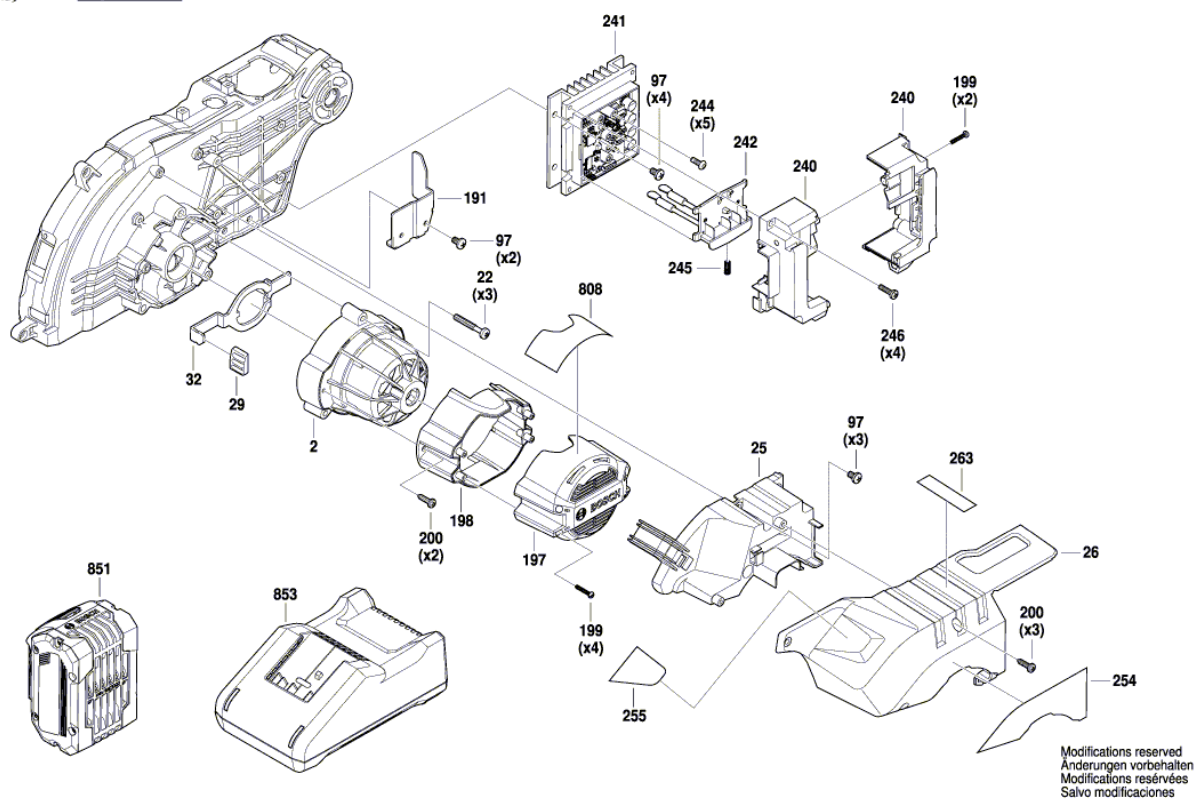


Illustration - Type - E

3 601 M41 000
Issue
Stand 19-06-05 **Fig./Abb. 3**

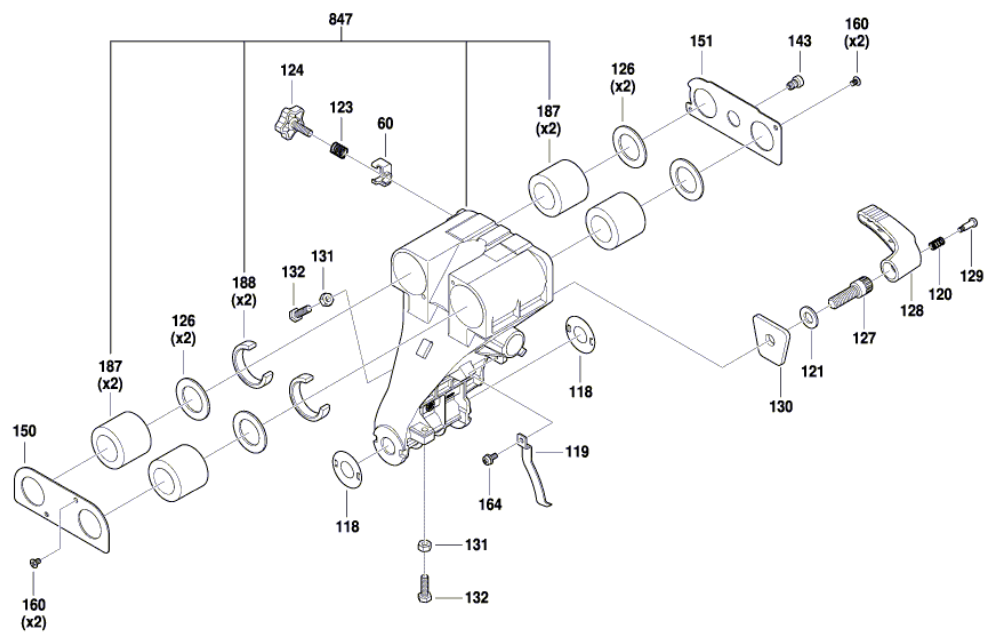

Modifications reserved
Änderungen vorbehalten
Modifications réservées
Salvo modificaciones

Illustration - Type - E

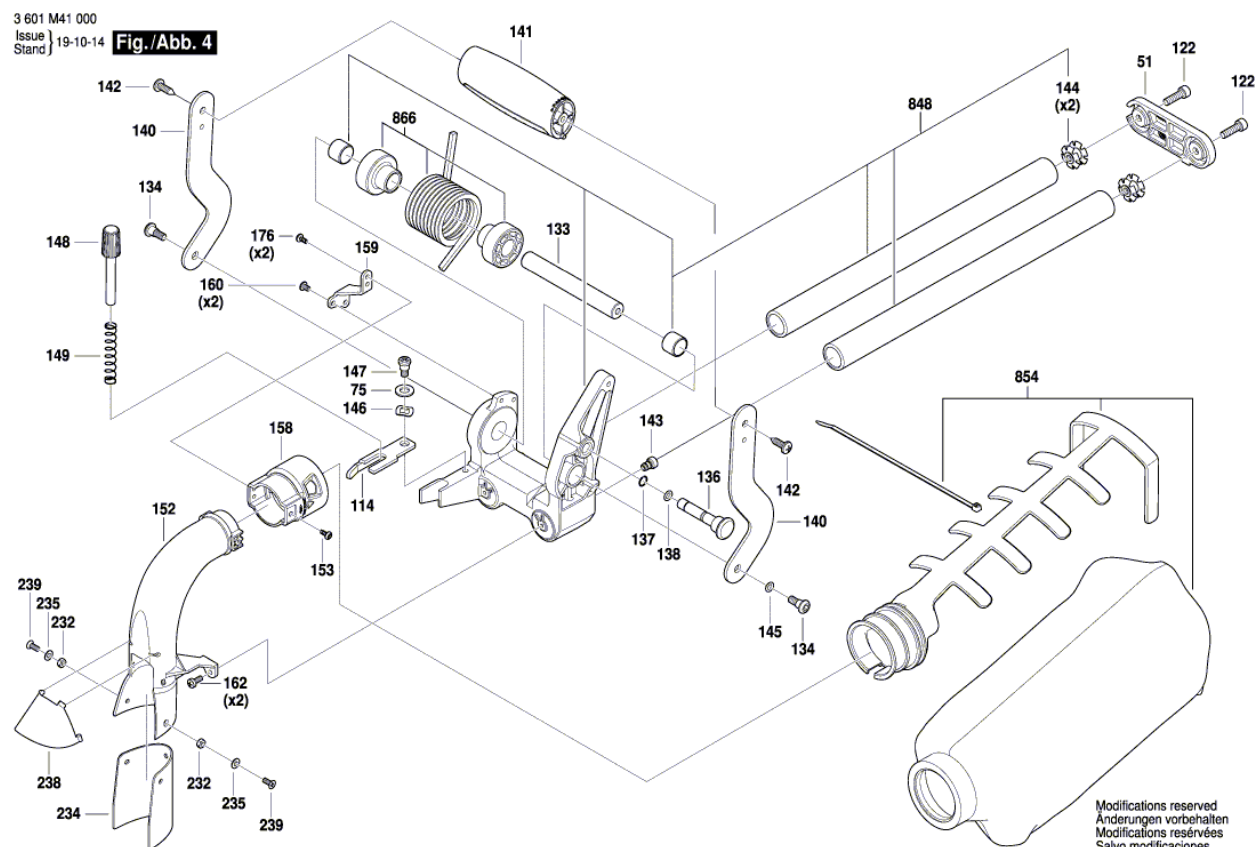


Illustration - Type - E

3 601 M41 000
Issue
Stand 19-06-05 **Fig./Abb. 5**


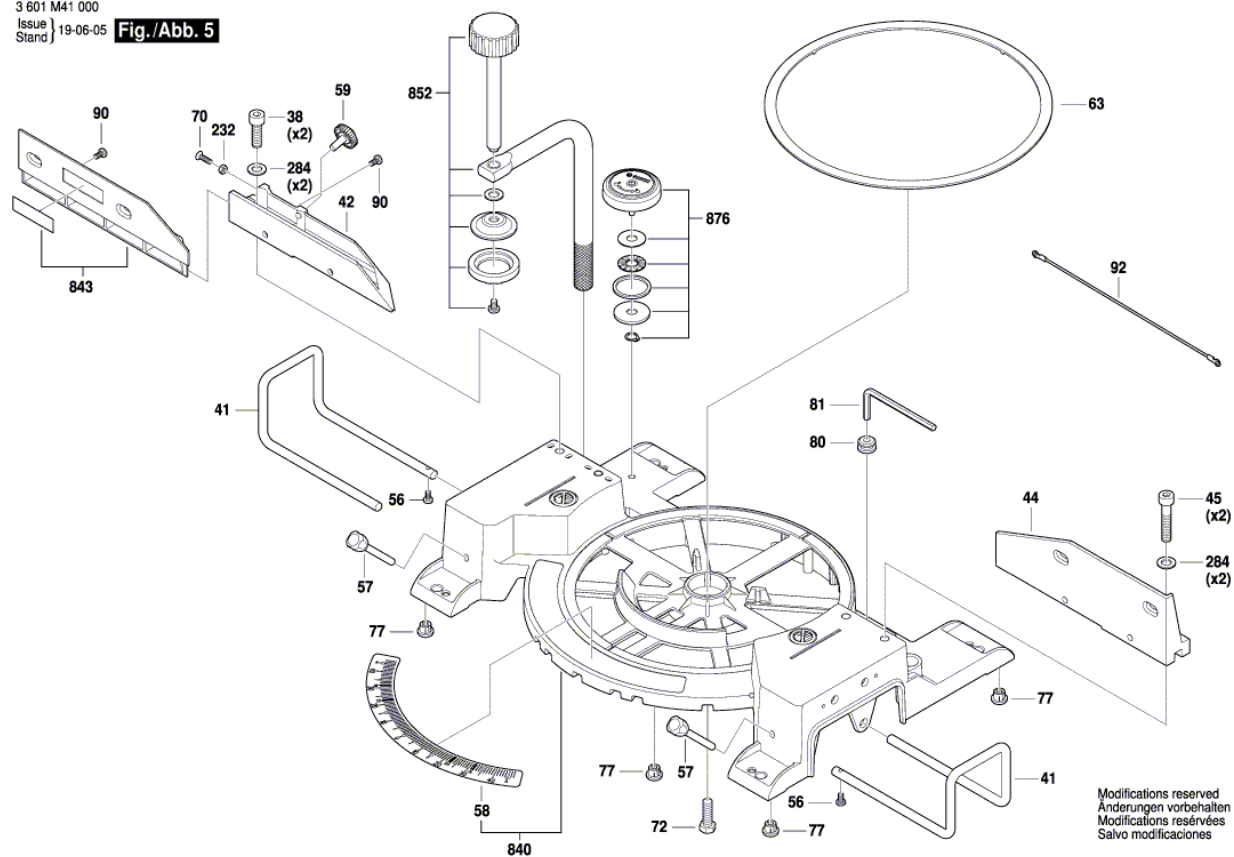


Illustration - Type - E

3 601 M41 000
Issue
Stand 19-06-05 **Fig./Abb. 6**

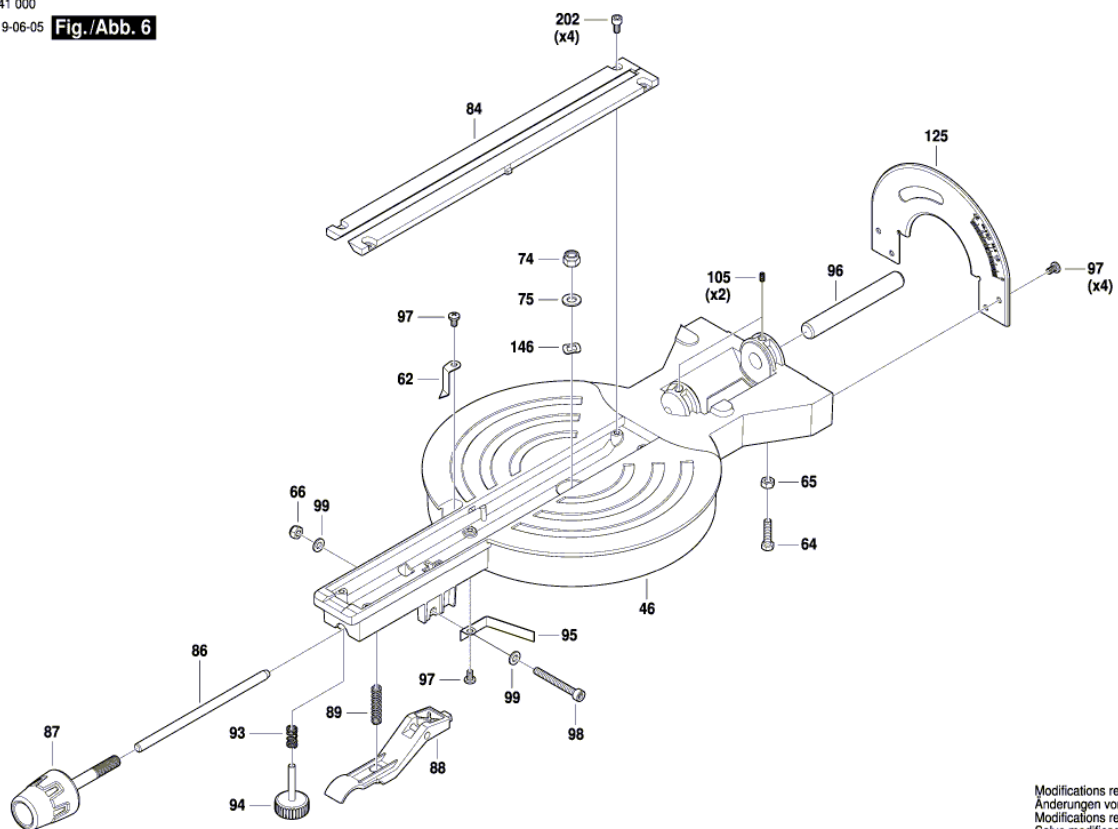

Modifications reserved
Änderungen vorbehalten
Modifications réservées
Salvo modificaciones

Spare parts list

Item	Part Number	Description	Illustration
4	2 607 202 382	Switch	1
21	1 609 B06 265	Ribbon cable	1
28	1 619 P01 642	Compression Spring	1
30	1 609 B06 268	Locking Lever	1
31	1 609 B06 269	Compression Spring	1
39	1 609 B06 570	Cover	1
52	1 609 B06 251	Handle	1
61	1 609 B00 863	Plain Washer	1
67	1 609 B06 571	Washer	1
90	1 609 B01 664	Screw	1
97	1 609 B04 086	Screw	1
101	1 609 B01 462	Shoulder Screw	1
111	1 609 B01 668	Washer	1
161	1 609 B05 201	Shoulder Screw	1
167	1 609 B01 602	Wear Plate	1
168	1 609 B04 188	Lower guard	1
169	1 609 B04 001	Linkage	1
170	1 609 B04 002	Cover	1
171	1 609 B04 004	Spring	1
172	1 609 BP7 145	Screw	1
173	1 609 B05 251	Spring Clip	1
174	1 609 B04 235	Ball Bearing	1
178	1 609 B00 974	Lock Nut	1
179	1 609 BP7 134	Tapping Screw	1
182	1 609 B04 205	Set screw	1
184	1 609 BT4 033	Nut	1
185	1 609 BP7 068	Spring retaining ring	1
186	1 609 BP7 050	Washer	1
189	1 600 200 029	Plain bearing	1
190	1 609 B04 017	Deflector	1
192	1 609 B04 018	Clamping Flange	1
193	1 609 B06 289	Clamping Flange	1
194	1 609 B05 364	Flange Bolt	1
195	1 609 B04 020	Wheel	1
200	1 609 B00 637	Tapping Screw	1

Spare parts list

Item	Part Number	Description	Illustration
201	1 609 B00 973	Screw	1
203	1 609 B00 458	Quick-Lock	1
212	1 609 B04 208	Screw	1
215	1 609 B04 664	Chip Deflector	1
225	1 609 B06 301	Cover	1
231	1 609 B06 266	Ribbon cable	1
236	1 609 B04 220	Rubber Strip	1
247	1 609 B06 267	Cover	1
822	1 609 B01 726	Laser	1
825	1 609 B04 127	Dust-Protection Cover	1
844	1 609 B06 666	LED lamp	1
849	1 609 B06 664	Arm	1
850	1 609 B05 349	Gear cover	1
855	1 609 B06 573	Gear	1
2	1 607 022 66T	DC motor	2
22	1 609 BP7 087	Tapping Screw	2
25	1 609 B06 252	Box	2
26	1 609 B06 253	Cover	2
29	1 609 B04 070	Cap	2
32	1 609 B04 073	Guide Bracket	2
191	1 609 B06 271	Chip Deflector	2
197	1 609 B06 264	Housing Cover	2
198	1 609 B06 286	Housing Cover	2
199	2 609 110 353	Torx Oval-Head Screw	2
240	1 609 B06 262	Battery Holder	2
241	1 607 233 5F8	Electronics Module	2
242	1 609 B06 832	Cable Set	2
244	1 609 B03 361	Screw	2
245	1 609 280 477	Compression Spring	2
246	1 609 B06 800	Screw	2
254	1 609 B06 283	Label	2
255	1 609 B06 285	Label	2
263	1 609 B06 575	Label	2
808	1 609 BN0 373	Nameplate	2
851	1 607 A35 0AT	Battery Pack GBA 18V 8.0Ah ProCore SCM	2

Spare parts list

Item	Part Number	Description	Illustration
853	2 607 225 921	Charger EU GAL 1880 CV 230/14,4-18V	2
60	1 609 B05 298	Cover	3
118	1 609 B04 134	Wear Plate	3
119	1 609 B03 758	Pointer	3
120	1 609 BP7 053	Compression Spring	3
121	1 609 BP7 045	Plain Washer	3
123	1 609 BP7 343	Contact strap	3
124	1 609 B03 755	Knob	3
126	1 609 B03 763	Felt Washer	3
127	1 609 B03 769	Bolt	3
128	1 609 B02 215	Lever	3
129	1 609 BP7 081	Screw	3
130	1 609 B03 773	Friction Plate	3
131	1 609 B01 041	Hex Nut	3
132	1 609 B03 776	Stop bolt	3
143	1 609 B03 753	Slide Stop	3
150	1 609 B02 203	Retaining Plate	3
151	1 609 B03 766	Retaining Plate	3
160	1 609 B01 561	Screw	3
164	1 609 B01 690	Screw	3
187	1 609 B03 774	Ball Bearing	3
188	1 609 B03 780	Spacer	3
847	1 609 B06 579	Pivot	3
51	1 609 B03 746	End cap	4
75	1 609 B00 670	Washer	4
114	1 609 B03 739	Stop Plate	4
122	1 609 B03 749	Hex Socket Head Cap Screw	4
133	1 609 B03 771	Pivot Pin	4
134	1 609 B06 272	Screw	4
136	1 609 B03 767	Detent Pin	4
137	1 609 B03 757	Clip	4
138	1 609 B00 601	O-Ring	4
140	1 609 B03 745	Handle Plate	4
141	1 609 B03 747	Carrying Handle	4
142	1 609 B03 768	Tapping Screw	4

Spare parts list

Item	Part Number	Description	Illustration
144	1 609 B03 752	Special Nut	4
145	1 609 B06 667	O-Ring 12,2 x 3,6 BLACK	4
146	1 609 B00 660	Spring Washer	4
147	1 609 B03 795	Shoulder Screw	4
148	1 609 B00 382	Knob RED	4
149	1 609 B00 417	Compression Spring	4
152	2 610 027 044	Dust Extraction	4
153	1 609 B03 777	Set screw	4
158	2 610 027 045	Dust Extraction	4
159	2 610 027 046	Bracket	4
162	1 609 B00 623	Screw	4
176	1 609 B04 163	Screw	4
232	1 609 B00 691	Nut	4
234	1 609 B03 791	rubber lip	4
235	1 609 B04 225	Plain Washer	4
238	1 609 B04 222	Rubber Strip	4
239	1 609 B00 633	Screw	4
848	1 609 B06 663	Yoke	4
854	1 609 B06 278	Dust Bag	4
866	1 609 B04 124	Torsion Spring	4
38	1 609 BP7 084	Screw	5
41	1 609 B04 154	Rod	5
42	1 609 B06 259	Mitre Fence	5
44	1 609 B06 261	Mitre Fence	5
45	1 609 B02 206	Screw	5
56	1 609 B00 780	Screw	5
57	1 609 BP7 326	Knob	5
58	1 609 B03 708	Scale	5
59	1 609 B05 382	Knurled Screw	5
63	1 609 B03 714	Wear Plate	5
70	1 609 B00 682	Screw	5
72	1 609 B05 203	Bolt	5
77	1 609 B00 705	Rubber Bushing	5
80	1 609 BP7 098	Rubber Ring	5
81	1 609 BP7 026	Hexagon Socket Screw Key	5

Spare parts list

Item	Part Number	Description	Illustration
92	1 609 B05 115	Cable	5
284	1 609 B00 703	Plain Washer	5
840	1 609 B06 665	Base	5
843	1 609 B06 578	Mitre Fence	5
852	1 609 B04 224	Clamp	5
876	1 609 B05 323	Knob	5
46	1 609 B05 238	Table	6
62	1 609 B00 717	Pointer	6
64	1 609 B04 236	Bolt	6
65	1 609 B04 227	Adjusting Nut	6
66	1 609 B01 949	Nut	6
74	1 609 B00 704	Lock Nut	6
84	1 609 B05 242	Support Plate	6
86	1 609 B05 240	Rod	6
87	1 609 B04 079	Knob	6
88	1 609 B05 241	Lever	6
89	1 609 B02 211	Spring	6
93	1 609 BP7 341	Contact strap	6
94	1 609 B03 727	Supporting foot	6
95	1 609 B03 729	Wear Plate	6
96	1 609 B04 108	Pivot Shaft	6
98	1 609 B03 723	Screw	6
99	1 609 B01 324	Plain Washer	6
105	1 609 BP7 143	Set screw	6
125	1 609 B03 762	Rotor	6
202	1 609 B06 270	Screw	6