


EXPLODED VIEW

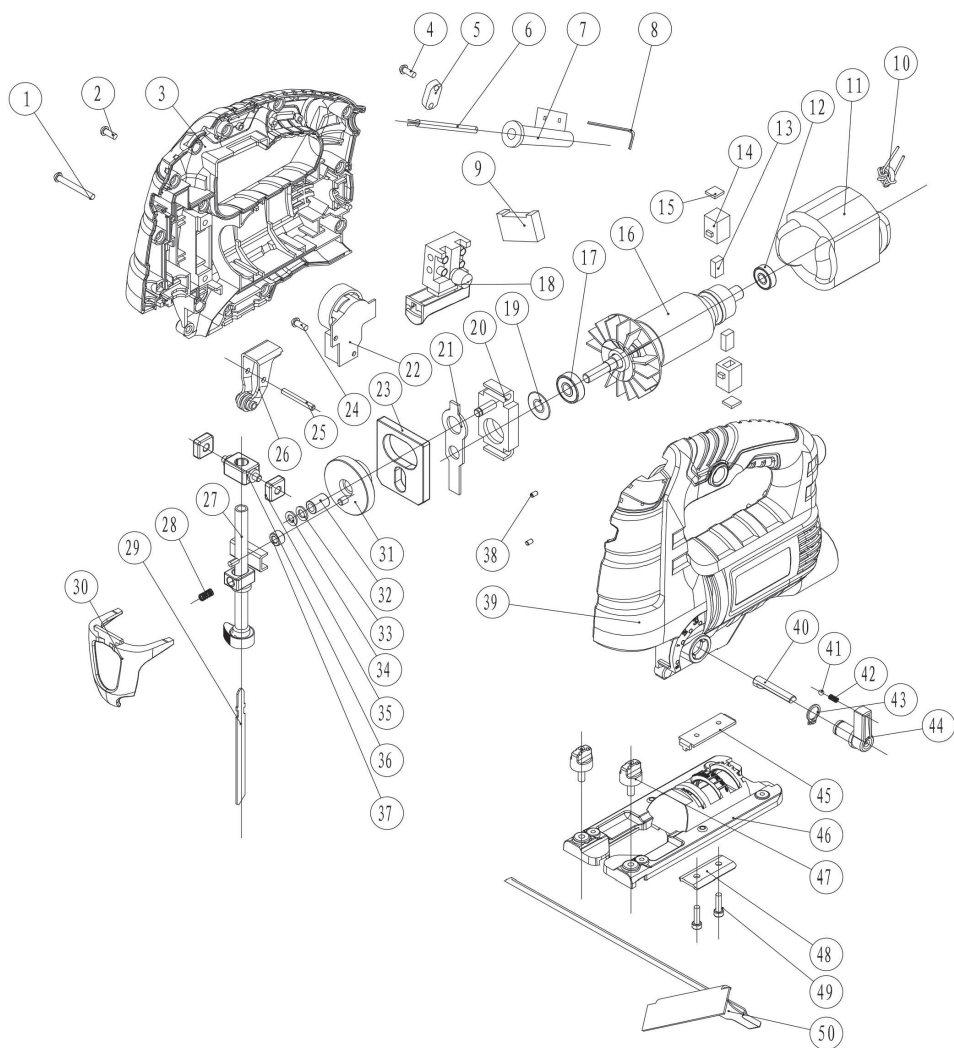

SPARE PARTS LIST

	Name	
1	screw4*45	2
2	screw4*16	11
3	housing-right	1
4	screw	2
5	wire plate	1
6	cable	1
7	cable guard	1
8	hex-spanner	1
9	capacitance	1
10	inductance	2
11	stator	1
12	bearing 607	1
13	brush	2
14	brush box	2
15	brush cover	2
16	rotator	1
17	bearing 608	1
18	switch	1
19	wool circle	1
20	central bracket	1
21	raise the top plate	1
22	speed controler	1
23	balance block	1
24	screw4*14	2
25	barrel frame locating pin	1
26	roller rack	1
27	reciprocating lever	1
28	reciprocating lever spring	1
29	saw blade	1
30	transport cover	1
31	big gear	1
32	roller bearing	1
33	flat washer	1
34	shaft antiextrusio ring	1
35	stent positioning block	2
36	up stent	1
37	small slider	1
38	barrel block locating pin	4
39	housing-left	1
40	shift knob pin	1
41	steel ball	1
42	knob spring	1
43	shaft antiextrusio ring	1
44	shift knob	1
45	up plate	1
46	base plate	1
47	fixed screw of guide ruler	2
48	down plate	1
49	screw of hex-spanner	2
50	guide ruler	1