


Exploded drawing of Reciprocating Saw RD-RS36

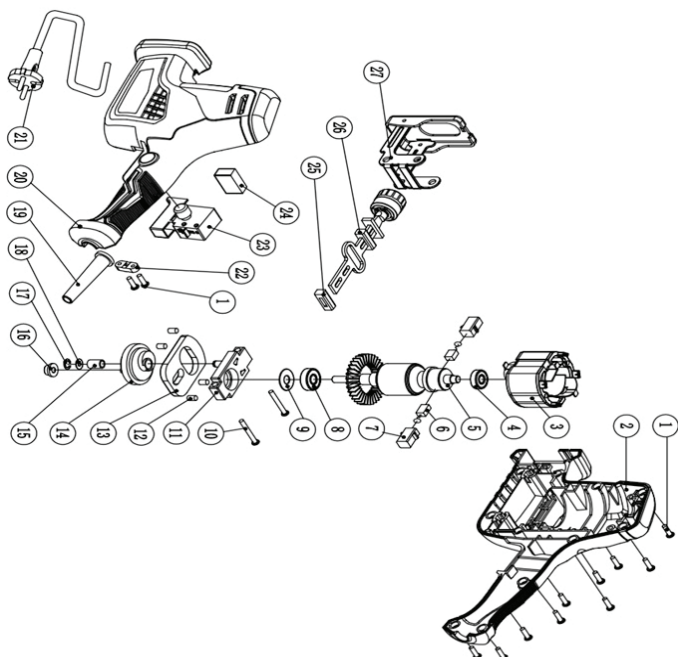

Spare parts list of Reciprocating Saw RD-RS36

No.	Description
1	screw ST3.9*14
2	right housing
3	stator
4	bearing 607ZZ
5	rotor
6	carbon brush
7	carbon brush box assembly
8	bearing 608-2RS
9	washer
10	screw ST3.9*30
11	holder
12	pin
13	balance block
14	big gear assembly
15	bearing
16	wheel
17	ring
18	washer
19	sleeve cover
20	left housing
21	cable
22	pressing plate
23	switch
24	capacitance
25	support
26	reciprocating bar
27	guide shoe