
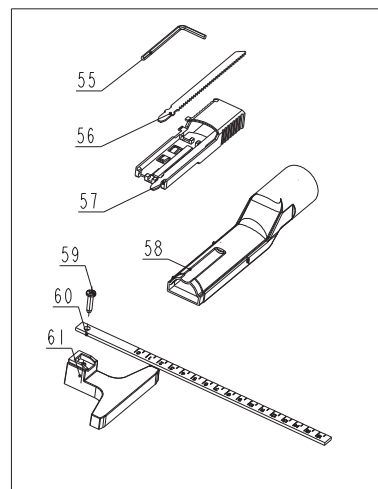


EXPLODED VIEW OF RDP-JS34

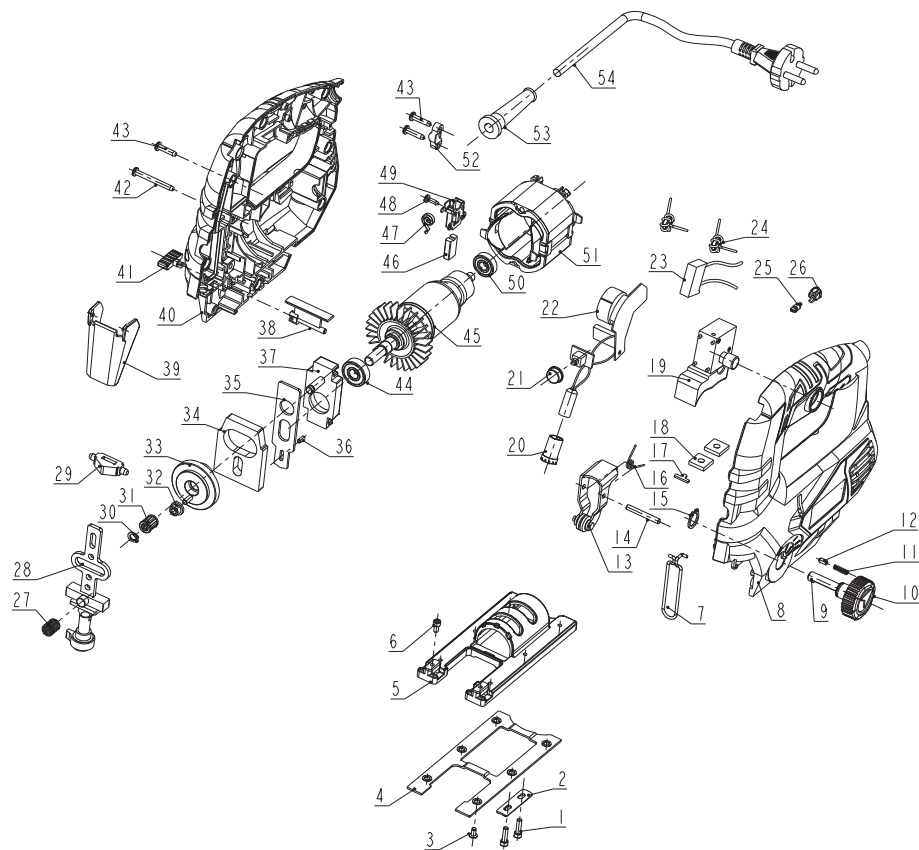

PARTS LIST RDP-JS34

№	Description	№	Description
1	screw M4X8	45	armature
2	gasket	46	bearing607
3	screw M4X8	47	stator
4	Aluminum plate iron plate	48	brush
5	Aluminum floor	49	Disk Spring
6	screw M4X6	50	screwST3X10
7	Steel bar.	51	Brush grip
8	Left Housing	52	epress plank
9	Knife pin	53	jacket of cable
10	Raise the knob.	54	power cord
11	spring	55	Hegonal wrench inside
12	Bullet.	56	Saw blade
13	Knife rack	57	Attachment Box
14	Cylinder pin $\Phi 4 \times 30$	58	Dust-sucking tube
15	Twisted sprin	59	Guide ruler
16	circlip 12	60	screw ST4X14
17	Base plate positioning plate	61	Guide ruler