


EXPLODED VIEW

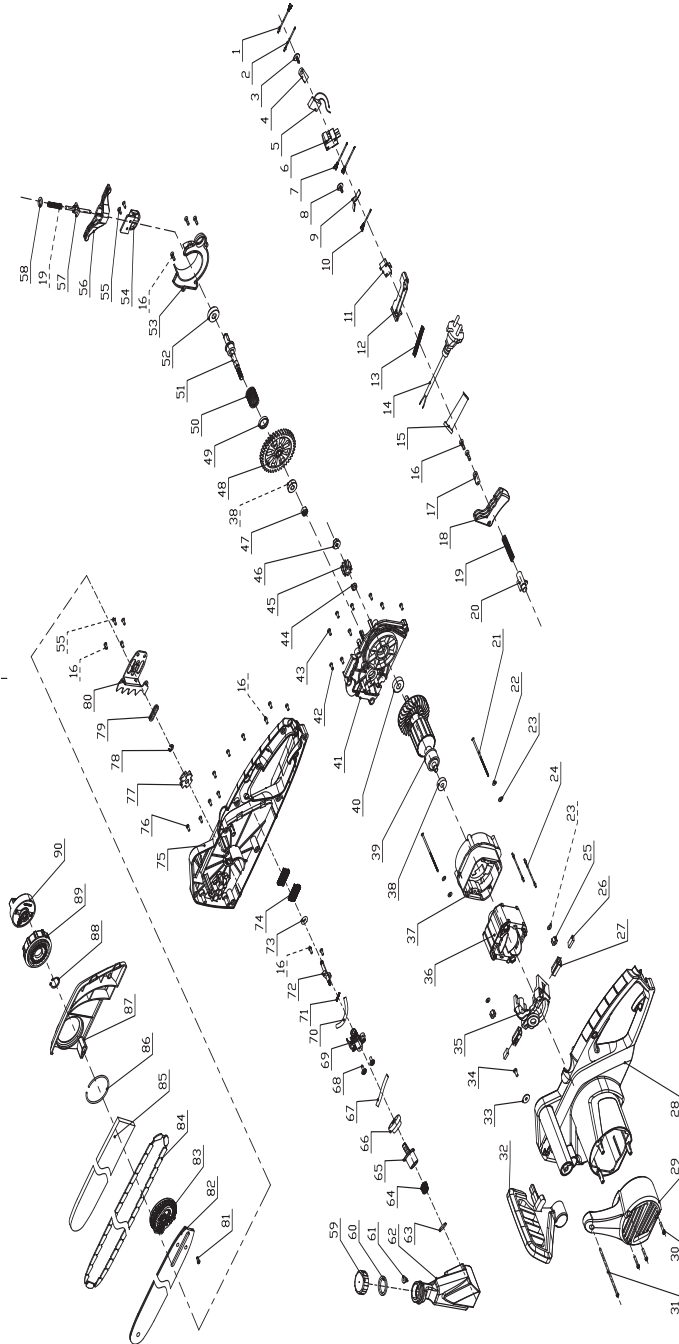

SPARE PARTS LIST

1	connecting line 1	1
2	connecting line 2	1
3	screw 3x8	1
4	pressing plate	1
5	capacitance	1
6	switch	1
7	connecting line 4	2
8	screw 4x8	1
9	brake spring plate	1
10	connecting line 5	1
11	micro switch	1
12	pushing rod	1
13	pushing rod spring	1
14	cable	1
15	cable sleeve	1
16	screw 4x12	10
17	pressing plate	1
18	switch button	1
19	brake spring	2
20	anti self lock button	1
21	stator screw	2
22	washer	2
23	flat washer	4
24	connecting line 3	2
25	nut 4	2
26	carbon brush	2
27	copper sleeve	2
28	left housing	1
29	motor back cover	1
30	screw 4x25	3
31	screw 5x150	1
32	front guard	1
33	flat washer	1
34	screw 5x20	1

35	motor back support	1
36	stator	1
37	wind proof	1
38	bearing 608	2
39	rotor	1
40	bearing 6000	1
41	support plate	1
42	screw 4x10	5
43	screw 4x14	4
44	gear sleeve	1
45	small gear	1
46	nut M8	1
47	nut M8	1
48	big gear	1
49	axle sleeve	1
50	torision spring	1
51	output shaft	1
52	bearing 6000	1
53	dust cover	1
54	brake fixing plate	1
55	screw 4x12	4
56	connecting rod	1
57	brake rod	1
58	washer	1
59	oil cap	1
60	oil cap washer	1
61	breather	1
62	oil tank	1
63	oil tank block	1
64	sponge filter	1
65	oil tank connector	1
66	oil tank seal ring	1
67	inlet pipe	1
68	screw 3x10	2

SPARE PARTS LIST

69	oil pump assy	1
70	oil out pipe	1
71	spring	1
72	oil outlet	1
73	seal ring	1
74	sponge	2
75	right housing	1
76	screw 5x16	9
77	sproket	1
78	E circlip	1
79	seal ring	1
80	spike bumper	1
81	screw	1
82	bar	1
83	SDS adjusting assy	1
		1
		1
		1
		1
		1
84	chain	1
85	bar cover	1
86	circlip	1
87	SDS sproket cover	1
88	retainer ring	1
89	adjusting knob	1
90	pressing knob	1