

Spare parts list

Item	Part Number	Description	Illustration
1	1 619 PC2 286	Housing	1
2	1 619 PC2 287	Stator	1
4	1 607 000 F3Z	Switch	1
5	1 619 PC2 293	Power supply cord	1
6	1 619 PC2 298	Grommet	1
7	1 619 PC2 300	Cable Clip	1
9	1 619 PC2 315	Manufacturer's nameplate	1
12	1 619 PC2 317	Capacitor	1
15	1 619 PC2 319	Fan	1
19	1 619 PC2 321	Torx Oval-Head Screw	1
22	1 619 PC2 322	Covering hood	1
23	1 619 PC2 323	Torx Oval-Head Screw	1
24	1 619 PC2 324	Toothed Belt Wheel	1
25	1 619 PC2 325	Cover Plate	1
26	1 619 PC2 326	Torx Oval-Head Screw	1
27	1 619 PC2 327	Axle	1
29	1 619 PC2 329	Compression Spring	1
33	1 619 PC2 333	Toothed Belt	1
34	1 619 PC2 334	Toothed Belt Wheel	1
35	1 619 PC2 335	Torx Oval-Head Screw	1
36	1 619 PC2 336	Cover	1
37	1 619 PC2 337	Cover	1
38	1 619 PC2 338	Cover	1
39	1 619 PC2 339	Adjustment Knob	1
40	1 619 PC2 340	Cover	1
41	1 619 PC2 342	Electronics Module	1
42	1 619 PC2 344	Cover Plate	1
43	1 619 PC2 345	Torx Oval-Head Screw	1
47	1 619 PC2 349	Torx Oval-Head Screw	1
52	1 619 PC2 354	Wear Plate	1
53	1 619 PC2 355	Torx Oval-Head Screw	1
54	1 619 PC2 356	Housing	1
55	1 619 PC2 357	Roller	1
56	1 619 PC2 358	Nut	1
58	1 619 PC2 360	Side Cover	1

Spare parts list

Item	Part Number	Description	Illustration
59	1 619 PC2 361	Felt	1
60	1 619 PC2 362	Base Plate	1
61	1 619 PC2 363	Torx Oval-Head Screw	1
62	1 619 PC2 364	Plain Washer	1
63	1 619 PC2 365	Nut	1
64	1 619 PC2 366	Spring	1
65	1 619 PC2 367	Ring	1
66	1 619 PC2 368	Compression Spring	1
70	1 619 PC2 372	Connecting Plate	1
651	1 619 PC2 373	Dust Bag	1
803	1 619 PS0 652	Armature	1
808	1 619 PC2 310	Nameplate	1
810	1 619 PS0 658	Carbon-Brush Set	1
816	1 619 PS0 659	Brush Holder	1
822	1 619 PS0 654	Gear Box	1
823	1 619 PS0 660	Pinion Shaft	1
826	1 619 PS0 656	Bracket	1
827	1 619 PS0 657	Housing	1
828	1 619 PS0 655	Gear	1
843	1 619 PS0 651	Roller	1