

SPARE PARTS AND EXPLODED VIEW

Explosive view No.	description
1	cable
2	cable sleeve
3	pressing plate
4	screw ST3.9*14
5	capacitance
6	left housing
7	switch
8	carbon brush box
9	carbon brush
10	bearing 607ZZ
11	stator
12	rotor
13	rubber nail
14	right housing
15	screw ST3.9*16
16	bearing 608ZZ
17	steel sleeve
18	fan blade
19	swing arm
20	dust tube
21	bearing 6001-2RS
22	seal ring
23	clamp cover
24	plastic base plate
25	steel wire
26	washer

